



# PARAGON<sup>®</sup> 80-ES HAIR STEAMER

Before installing and using this unit, please carefully read these instructions. Be sure to keep this available for later reference.

## **UNPACKING**

Unpack carefully. There are glass parts. **BE SURE TO REMOVE ALL FOAM PACKING FILLER BEFORE APPLYING POWER TO THE UNIT.** Check to ensure that the following items are included.

- Steamer top, assembled complete with:
  - Hood Complete
  - Reservoir Tank (80-ES-08)
  - Chrome Cap & Stem (80-ES-10)
  - Collection Bottle Complete (80-ES-05)
- Roller Stand, assembled with:
  - 5 Roller Casters
  - Leg Assembly
  - Height Adjust Pole w/ Knob

## **WARNING**

**USE ONLY DISTILLED WATER WITH THIS MACHINE. DISTILLED WATER SHOULD BE USED TO HELP PROLONG THE LIFE OF THE MACHINE. DO NOT RUN CHEMICALS THROUGH THE APPLIANCE SUCH AS CLEANING AGENTS OR AROMA ADDITIVES. THESE CLOG THE WATER WAYS BY LEAVING DEPOSITS.**

**RESERVOIR TANK IS FRAGILE. DROPPING THE RESERVOIR TANK MAY CAUSE HAIRLINE CRACKS IN THE RESERVOIR TANK.**

**CAUTION: DO NOT ATTEMPT TO REMOVE OR INSERT THE RESERVOIR TANK WHEN UNIT IS HOT, DURING USE, OR IMMEDIATELY AFTER USE.**

## **OPERATION**

- A. Remove reservoir tank. Unscrew the chrome cap and stem.
- B. Check for the gasket inside the cap. The gasket's function is to help seal the reservoir tank and to prevent water from leaking.
- C. Pour distilled water into the reservoir tank. Fill the reservoir tank. Replace the chrome cap and stem.
- D. Select the treatment intensity by using turning the temperature knob.
- E. Turn the timer switch to the desired treatment time. When selecting the treatment time, please allow time for the steamer to warm up (approximately 5 min).

## **DRAINING THE UNIT**

Unplug the unit before performing maintenance.

- A. The hair steamer should be drained at the end of each day's use.
- B. Unplug the unit before performing maintenance.
- C. Allow the unit to cool down before attempting to drain the unit.
- D. Prepare a pitcher or other water receptacle.
- E. Locate the drain opening. Water will drain from this opening.
- F. Unscrew the black plastic cap by turning counter clockwise.
- G. Replace the black cap.

## **MAINTENANCE**


All appliances should be cleaned after each use.

- A. A safety check should be performed before the start of each day's use. If unit is unsafe to use or needs repair, please call the manufacturer for instructions on how to send your machine in for service.
- B. Only distilled water should be used in the hair steamer. The use of tap water will eventually cause malfunction of the machine, due to calcium and mineral deposits.
- C. Do not use harsh chemical to clean the appliance. Use a soft brush or cloth when cleaning.

**TROUBLE SHOOTING**

When machine fails to work properly, use the following directions to detect the cause of the problem:

- A. Check the power cord for proper connection.
- B. Make sure the timer switch is in turned to designated time position.
- C. Check the power source by connecting another electrical appliance to the AC outlet.
- D. Restart the unit. Move the power switch to its OFF position. Wait 5-10 minutes before turning the steamer back on.
- E. If water is leaking, wait until the unit has cooled, then try to tighten the chrome cap cover. Check that the gasket is in the place. If leaking persists, you may need a new reservoir tank. Use the test below to determine if a new reservoir tank is needed.

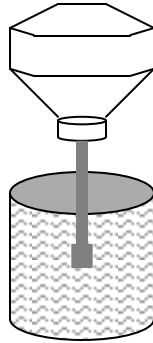

1. Fill a cup to the brim with water
2. Fill the reservoir tank with water
3. Place the chrome stem into the cup
4. Watch to see if the water level in the cup rises

Water level rising = leak

- Check to see that the cap is securely fastened and the gasket is in place.
- There may be a crack in the reservoir tank.  
Replacement tank (80-ES-08)

- F. Some units are equipped with a heat-sensing thermostat safety fuse. If your unit(s) becomes too hot, the thermostat will automatically shut the unit down. After cooling to the proper temperature, the element will operate normally.
- G. If the problem persists, please contact your dealer for assistance. To prevent an electrical shock, PLEASE DO NOT DISASSEMBLE THE MACHINE.

**WARRANTY**

- A. 1-Year warranty against manufacture defect
- B. The reservoir tank is not a warranty item

Variable Settings 110V, 620W, 5.7A

GARFIELD INTL. CO., INC.  
 15977 HERON AVENUE  
 LA MIRADA, CA 90638

PARAGON® is a trademark of Garfield International.



Questions or Comments?  
 Please call 1-888-731-6688



[www.garfieldint.com](http://www.garfieldint.com)

**ATTENTION**

For your protection in the event of theft or loss of this product, please fill in the information below for you own personal records.

**Model No** \_\_\_\_\_ **Serial No.** \_\_\_\_\_  
(Located on back or bottom side of unit.)

**Date of Purchase** \_\_\_\_\_ **Purchase Price** \_\_\_\_\_

**Purchased From** \_\_\_\_\_