

SAVE THESE INSTRUCTIONS

G450-8 Massage chair
Configure: 9640 Model chair
Operation Instruction



- Thank you for purchasing this product.
- In order to achieve maximum benefit and safety while using the model 9640 chair, please read and follow this manual carefully before operating this product.
- Please pay particular attention to important safety instructions, indicators and warnings within.
- Keep this manual handy for future reference.
- Note: The manufacturer reserves the right to revise chair design and description without further notice.

CONTENTS

Safety and maintenance	02
Name and function of components	08
Function & Efficacy	09
Method of usage	10
Product specification	17

IMPORTANT SAFETY INSTRUCTION

Power-down after each use!

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using (this appliance)

DANGER-To reduce the risk of electric shock:

1) Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

WARNING-To reduce the risk of burns, fire, electric shock, or injury to Persons:

- 1) An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts servicing.
- 2) Do not operate under blanket or pillow. Excessive heating can occur and Cause fire, electric shock, or injury to persons.
- 3) Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.
- 4) Use the appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 5) Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or immersed in water. Return the appliance to a service center for examination and repair.
- 6) Do not carry this appliance by supply cord or use cord as a handle.
- 7) Keep the cord away from heated surfaces.
- 8) Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like keep vents clear.
- 9) Never drop or insert any object into any opening.
- 10) Do not use outdoors.
- 11) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 12) To disconnect, turn all controls to the off position, then remove plug from outlet.
- 13) The appliance is intended for household and indoor use only.
- 14) Connect this appliance to a properly grounded outlet only ,see grounding

Safety and maintenance

instructions .

- 15)Keep children away from extended foot support (or other similar parts
- 16)Do not use massager in close proximity to loose clothing or jewelry.
- 17)Keep long hair away from massager while in use.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This product must be grounded ,if it should malfunction or breakdown ,grounding provides a path of least resistance for electric current to reduce the risk of electric shock ,this product is equipped with a cord having an equipment grounding conductor and a grounding plug ,the plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances must use gfci class A.

DANGER:Improper connection of the equipment grounding conductor can result in a risk of electric shock ,check with a qualified electrician or serviceman of you are in doubt as to whether the product is properly grounded ,do not modify the plug provided with the product-if it will not fit the outlet,have a proper outlet installed by a qualified electrician Employing class A ground fault circuit interrupter.

CONSIGNES DE SÉCURITÉ IMPORTANTES

lors de l'utilisation d'un appareil électrique, des précautions de bases doivent être respectées, y compris ce qui suit :

Lisez toutes les instructions avant d'utiliser l'appareil.

DANGER- Pour réduire le risque de choc électrique:

- 1) Toujours débrancher cet appareil de la prise électrique immédiatement après usage et avant nettoyage

AVERTISSEMENT- Pour réduire le risque de brûlures, d'incendie, de choc électrique ou de blessures:

- 1) Cet appareil ne doit jamais quitter votre surveillance lorsqu'il est branché. Débranchez-le de la prise lorsqu'il est inutilisé, et avant de placer ou d'enlever des pièces.
- 2) Ne pas utiliser cet appareil sous une couverture ou un oreiller. Une chaleur excessive peut provoquer un incendie, un choc électrique ou des blessures corporelles.
- 3) Soyez prudent et maintenez une surveillance accrue lorsque cet appareil est utilisé par, sur, ou près des enfants, de personnes invalides ou handicapées.
- 4) Utilisez l'appareil uniquement pour un usage habituel, comme décrit dans ce manuel. Ne pas utiliser d'accessoires non recommandés par le fabricant.
- 5) Ne jamais faire fonctionner cet appareil si le cordon ou la fiche sont endommagés, s'il ne fonctionne pas correctement, s'il est endommagé ou s'il est tombé dans l'eau. Retournez l'appareil au service technique pour examen et réparation.
- 6) Ne transportez pas cet appareil par le cordon d'alimentation ou d'utilisation comme une poignée.
- 7) Gardez le cordon loin des surfaces chauffées.
- 8) Ne jamais faire fonctionner l'appareil en obstruant les ouvertures d'air. Gardez les ouvertures à l'air, libre de peluches, de cheveux, etc.
- 9) Ne jamais laisser tomber, ou insérer d'objet dans les ouvertures.
- 10) Ne pas utiliser à l'extérieur.
- 11) Ne pas utiliser dans les lieux où des aérosols (vaporisateurs) sont utilisés, ni là où l'oxygène est administré.
- 12) Pour débrancher, mettre tous les boutons de l'appareil sur la position arrêt, puis retirer la fiche de la prise.
- 13) L'appareil est destiné à un usage domestique et à l'intérieur seulement.
- 14) Connectez cet appareil à une prise correctement reliée à la terre. Voir les instructions de mise à la terre.

CONSIGNES DE SÉCURITÉ IMPORTANTES

15) Éloignez les enfants du support de pied ouvert (ou des autres pièces semblables).

16) Ne pas utiliser de massage à proximité des vêtements amples ou des bijoux.

17) Garder les cheveux longs à l'écart de masseur en cours d'utilisation.

 
CONSERVER CES INSTRUCTIONS INSTRUCTIONS DE BASES

Ce produit doit être relié à la terre. Si il dysfonctionne ou tombe en panne, la terre fournit un chemin de moindre résistance pour le courant électrique afin de réduire le risque de choc électrique. Cet appareil est équipé d'un cordon avec un conducteur de mise à la terre des équipements et une prise de terre. La fiche doit être branchée dans une prise appropriée qui est correctement installée et mise à la terre conformément à la réglementation locale.

DANGER: un mauvais branchement de l'équipement à la prise de terre, peut entraîner un risque de choc électrique. Consultez un électricien qualifié si vous avez des doutes quant à savoir si le produit est correctement mis à la terre. Ne pas modifier la fiche fournie avec le produit si elle ne rentre pas dans la prise. Adressez vous à un électricien qualifié le cas échéant.


S'il vous plaît noter que lorsque ne pas coincer votre détection des doigts Avant le nettoyage ou la réparation doivent couper l'alimentation doit utiliser la classe GFCI A.

Massage System Installation

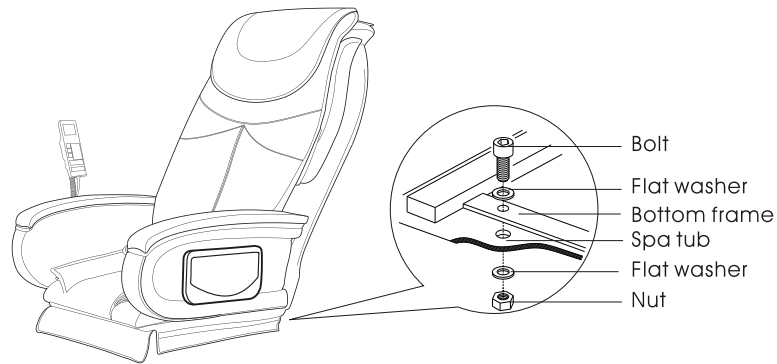

1. select a concrete or wood or chinaware platform with an area more than 40cm*36cm
2. drill four holes on each corner with a diameter 7.8mm
3. Fasten chair frame to platform using hardware provided, as per illustration above. Ensure base fastened securely.

 Massage System Installation

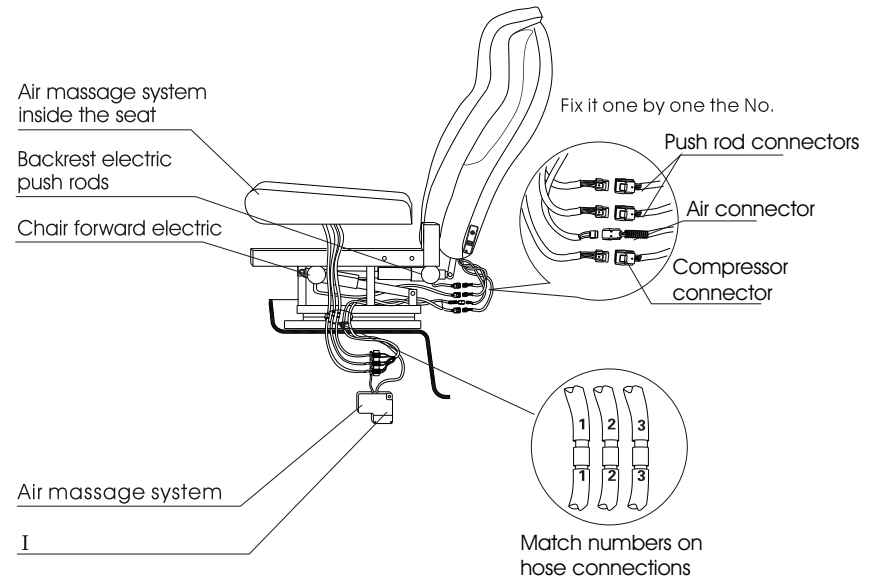


I NOTE:Remark:air pump box(include air pump, magnetism valve and so on) is a optional parts.Clients can choose it at their request.

Connection of airpump

1. airpump box placed on a horizontal surface
 2. connected the cord to massage chair G to G, C to C.
 3. connected the tubes A to A, B to B to the massage chair.
- Please also refer to above drawings and make sure your right connection
4. To ensure connections for air compressor and valves are properly made as well as connections for back incline/recline & forward/backward actuators have been properly made, test controller functions prior to use.

 Name and function of components

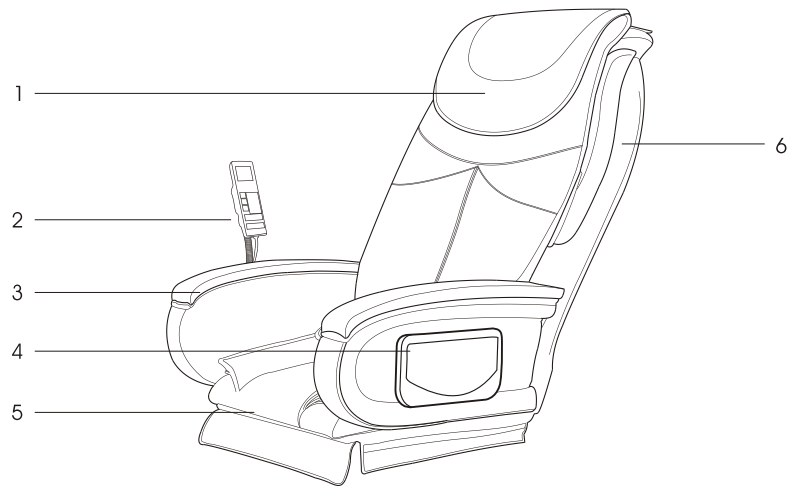

1. Detachable pillow pad
2. Control
3. Armrest
4. Fold-down tray
5. Detachable seat cushion
6. The back covering

Function & Efficacy

Function

 
- Designed with a four-wheel driven muted massage mechanism which can move up and down in the backrest.
- Programmed with five kinds of emulational massage functions of Shiatsu, kneading, flapping, knocking and synchronous kneading and flapping.
- Blue light LCD shows all the massage functions, action modes, Program duration, massage speed, intensity, width of the massage hands, massage position and so on. The back light will last one minute after turning off the machine.
- Programmed with manual and automatic control modes for the upper body.
- In automatic mode, a selection of three massage-type combinations are available: Whole body, shoulder and neck and back and waist. In manual mode, a
- In manual mode, a selection of three massage functions are available: overall, fixed and partial area.
- With “fixed”, the massage hands can be moved up or down realtime. Each massage function has five levels speed options; the width between the two massage hands can be adjusted three levels of wide, medium and narrow when it is under flapping, shiatsu or knocking state.
- Equipped with 5airbags with four air pressure modes and two strengths.
- Seat moves forward/backward and inclines/reclines.
- Massage hands return to original position when chair is powered-down.

Efficacy

- Dispel fatigue.
- Improve blood circulation.
- Alleviate muscle fatigue.
- Relax tense muscles.
- Alleviate nerve aches.
- Alleviate muscle aches.

Method of usage

1. Controller operate

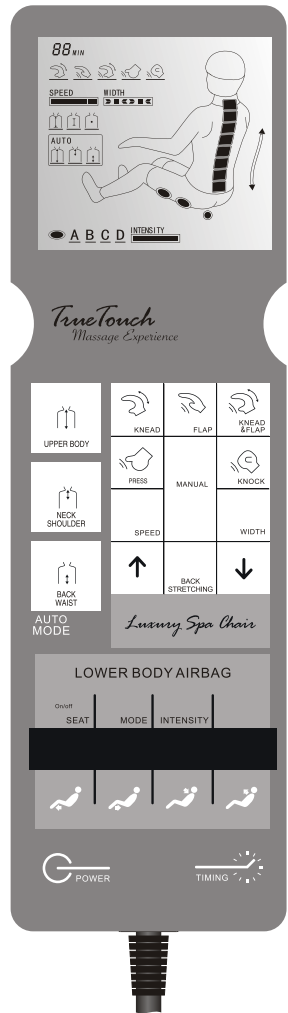

Button	Adjust massage balls
	To start or stop massage of the upper body, the button does not work when the massage system is at its position of recovery.
	3 duration levels 10 mins, 20 mins and 30mins.
	Automatic massage programs Adopt the various tactics to carry on automatic massage to different position of the upper part of the body, the massage position covers the whole upper part of the body.
	To carrying on automatic massage around the neck shoulder mainly
	Carry on automatic massage around in carrying the lower back/waist mainly

Method of usage

(1) Upper body manual massage, lower body massage
upper body manual massage:

Function	Button	Display status	Adjust massage balls
Method	PRESS		Speed, Width, Strength
	KNEAD		Speed, Strength
	FLAP		Speed, Width, Strength
	KNEAD & FLAP		Speed, Strength
	KNOCK		Speed, Width, Strength





Speed		Speed 5 speed options available
Width		Width 3 width options available

Backrest stretch		Upper body(overall) trip massage	
		Central area(partial) trip massage	
		Fixed position (fixed) massage	

(2) Lower body air pressure manual massage:

BUTTOCK		ON/OFF button of buttock airbag massage
Mode		4 options of buttock airbag modes A, B, C, D
Strength		Adjusting the intensity of airbags, of two levels.


Method of usage

Forward		Press and hold this button, the chair will move forward, to stop release your finger.
Backward		Press and hold this button, the chair will move backward, to stop release your finger.
Incline		Press and hold this button, the chair will move upward, to stop release your finger.
recline movement		Press and hold this button, the chair will move downward, to stop release your finger.

• Movement will stop when piston reaches maximum/minimum extension as well.

2. Component installation instructions.

 - Place the bottom frame of massage chair on the spa tub.
- Make sure the holes of the bottom frame are aligned with the pre-drilled holes on the spa tub.
- Secure the massage chair onto spa tub by using provided hardware as shown in the diagram below.

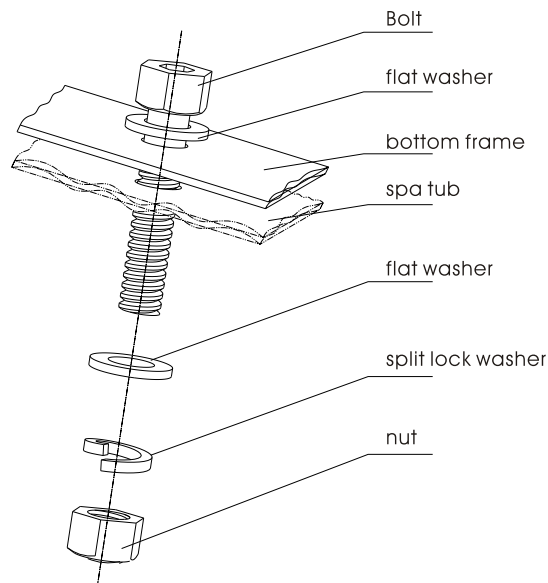


Method of usage

The installation of the Backrest

1. Align backrest support shafts with backrest support seats. Drop-in to engage locking hook (see fig 1).
2. Lay back backrest and align electric cylinder bolt with backrest electric cylinder support and engage backrest electric cylinder support locking hook (See fig 2).


The Removal method of the backrest

 1. Fig 2, disengage #6 & pull backrest forward.
2. Fig 1, lift #3 (both side) & pull backrest up.

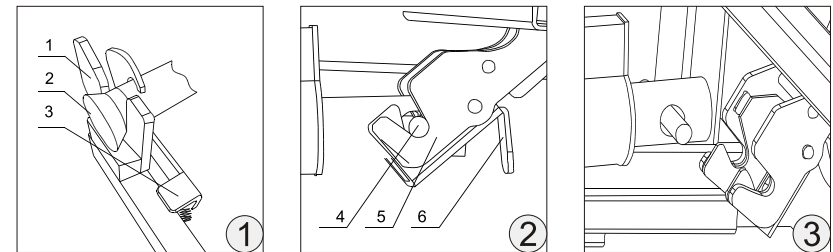

- # 1 Backrest support seats
 - # 2 Supporting shaft of the Backrest
 - # 3 Backrest support seats self Locking hook
 - # 4 Electric cylinder bolt
 - # 5 Backrest electric cylinder support
 - # 6 Baxkrest electric cylinder support self locking hook
- NOTE: Ensure cylinder connectors are disengaged.

 Method of usage

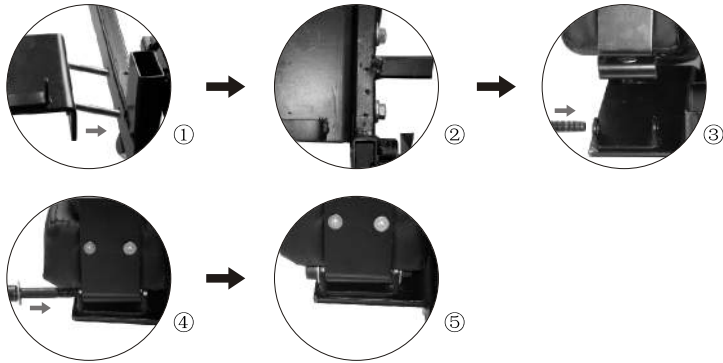


- 1) 1 & 2 fasten rectangular “L” racket (plate) with bolts provided.
- 2) Put the screws into the rectangular plate.
- 3) Once rectangular plate is fixed to the frame; the next step is to install the armrests
- 4) Bolts go through bottom-rear of armrest bracket, then secured with nuts.
- 5) The seat frame and armrest installation is finished.

3. Operation sequence


POWER-UP

 - (1).insert the plug into the socket outlet.
- (2).switch on the power button behind the armrest.



MASSAGE

 
- (1)Select relative massage according to the operation instructions of the control.

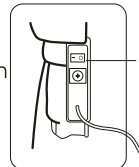

POWER

POWER-DOWN

 - (1).stop power on controller
- (2).switch off the power button behind the armrest.
- (3).pull the plug out of the socket outlet.




Method of usage

4. Attaching or detaching the pillow pad and back cushion

The pillow pad and back cushion (recommended) reduces the kneading intensity of your neck and shoulder, but you can decide to put it on or not according to your personal need.(1)Zipper connects the back cushion.(2). Hook & loop ribbon connects the pillow pad and back cushion.

 
WARNING : IN CASE OF DANGER, DO NOT REMOVE THE CUSHION

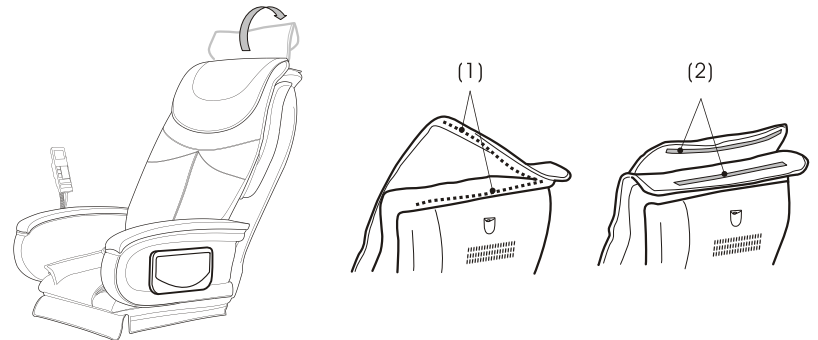

5.To adjust the back simultaneously

Press and hold “” button to recline/ “” button to incline. See table page.10 for controller function.

 
WARNING:DO NOT EXERT ANY PRESSURE OTHER THAN YOUR OWN WEIGHT ON THE BACK WHILE IT IS RISING.

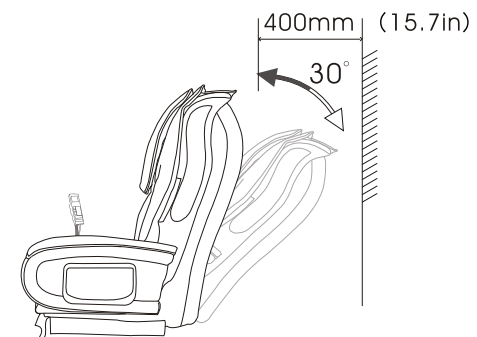

Method of usage

6. TO ADJUST SEAT FRAME SEPARATELY

 The flex function of seat frame could fix the different height of the people to adjust the massage place of the calf airbags, the maximum distance moving forward and backward is 120mm. See table page.10 for controller function.

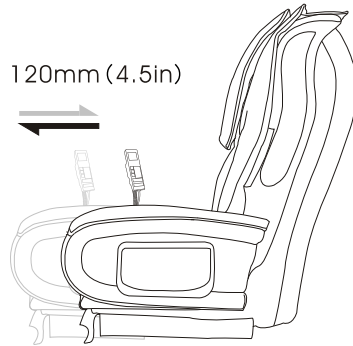

Product Specification

Name: G450-8 Massage chair
Configure: 9640 Model chair
Input Voltage: 110-120V~ 60Hz
Input power: 180W
Safety structure: Class I