

522 FIXTURE CARTRIDGE REPLACEMENT

NOTE: Please read these instructions through before starting to familiarize yourself with the various components.

1. Remove the fixture from the bowl:
NOTE: It is NOT necessary to disconnect the supply hoses.
 - a. **VERY IMPORTANT:** Turn off the hot and cold supply valves under the bowl.
 - b. Lift the Handle to release any water pressure remaining in the fixture.
 - c. Pop the Hot/Cold Button out of the Handle.
 - d. Insert a small flat blade screw driver through the Button opening and loosen the Set Screw securing the handle.
 - e. Lift the Handle off the Fixture.
2. Unscrew the Escutcheon to release the fixture from the Bowl.
3. Place a mark on the side and bottom of the the Fixture Body to show the correct orientation for reassembly.
4. Unscrew 3 phillips head screws from the top of the Fixture.
5. Gently pull the Fixture Body off of the Fixture Base.
6. Remove and discard the old cartridge.
7. Place the new Cartridge onto the Fixture Base. Insert the two small alignment pins on the bottom of the Cartridge into the holes in the Fixture Base.
8. Reassemble the Fixture Body onto the Fixture Base with three Phillips screws.
9. Reinstall the Fixture into the Bowl. Use Plumber's putty to seal the Fixture Escutcheon. Turn on the supply valves and test the Fixture.

