

DRYER INSTRUCTIONS

This guide contains important instructions and facts about your professional Hair Dryer. These instructions are simple but they are very important.

Study the guide carefully and follow the instructions closely so that every stylist develops correct habits of operation which will ensure the continued efficient and trouble free performance from your Professional Dryer.

DRYER IMPORTANT SAFEGUARDS

When using this Hair Dryer, especially when children are present, basic precautions should always be followed, including the following:

**NOTE: READ ALL INSTRUCTIONS BEFORE USE.
KEEP AWAY FROM WATER.**


DANGER: To reduce the risk of electrocution:

1. Always unplug this appliance immediately after using.
2. Do not place or store appliance where it can fall or be pulled onto a tub or sink.
3. Do not use while bathing.
4. Do not place in or drop in water or other liquid.
5. Do not reach for an appliance that has fallen into water. Unplug immediately.

WARNING:

To reduce the risk of burns, electrocution, fire or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Use this hair dryer only for intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

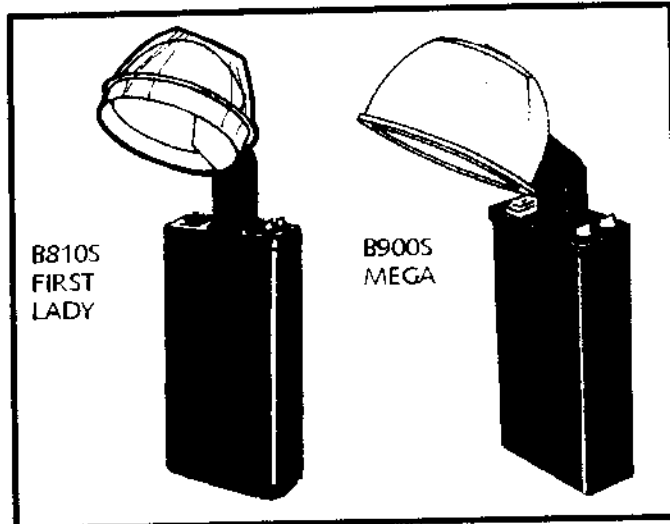

3. Do not operate with a damaged cord or plug. If hair dryer malfunctions or is damaged in any manner, contact authorized service representative for examination or repair.
4. Keep cord away from heated surfaces.
5. Never block the air opening of the hair dryer. Keep air openings free of lint, hair, etc.
6. Never drop or insert any object into any opening.
7. Do not use outdoors or operate the hair dryer at the same time aerosol sprays products are being applied to hair.
8. See Grounding Instructions. Connect the hair dryer to a properly grounded outlet only.
9. Do not direct airflow toward eyes or other heat sensitive areas.
10. Do not exceed rating of convenience outlet as marked.
11. Close supervision is necessary when the dryer is used by, on, or near children or invalids.
12. Do not use this dryer to dry a wig which is made of something that may burn, or a wig that has been cleaned in something that may burn and which may still have some of the cleaner on or in it.

SAVE THESE INSTRUCTIONS