



INSTALLATION OF STAND/BASE


- Standing version: 1) Assemble the stand as illustrated in ill.s.8
2) Place the machine onto the stand, and adjust it to desire height.

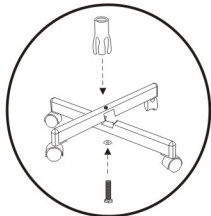

Type 1

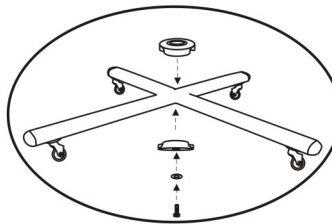

Type 2

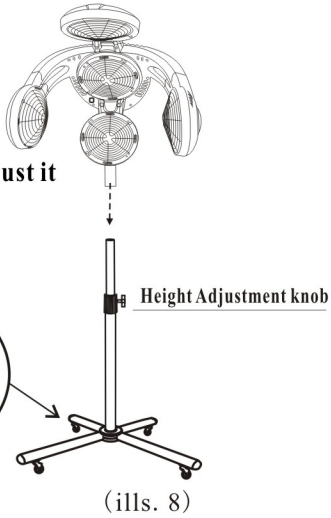


- Caution:**
- 1)Do not touch the surface or the safety net on the circular heating element, in order to prevent being burnt, as tremendous heat would be produced during operation
 - 2)An earth wire must be connected to the wall power supply, thus, the machine has to be earthed.
 - 3)Machine must be serviced of repaired by a certified technician or technician from our authorized dealer. Repaired machine must be fully inspected in order to meet safety standards before reused.
 - 4)In the case when the wire is damaged or aged, new 53 (RVV) 3*0.75mm² wire must be replaced by a certified technician or technician from our authorized dealer.



Trouble shooting:

Status	Reason	Solution
There is some noisy with the fan.	1, There is something tight the fan leaves. 2, There is no lubricating oil in the part of rotation. 3, The fan is very dirty. 4, Faulty fan.	1, Taking out the dopant. 2, Add the lubricating oil to the part of rotation. 3, Clean the fan. 4, Replace the fan.
Heating element does not produce heat.	1, Heating element was not chosen. 2, The wire become loose. 3, Faulty processor, heating element, thermostat.	1, Adjust temperature to non-zero status. 2, Tight the wire. 3, Replace the processor, heatin element, thermostat.
The fan stop working.	Electolyer or processor is broke.	Replace the spare parts.

Drying Accelerator

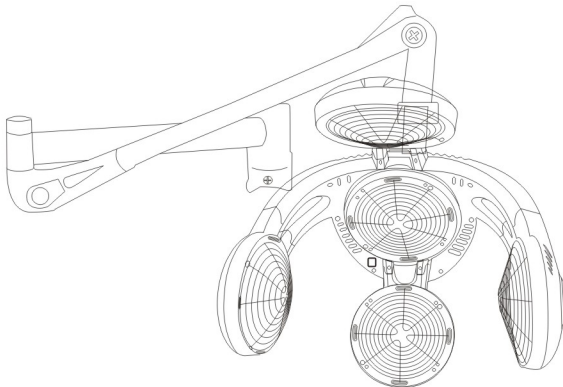


CONTROL PANEL

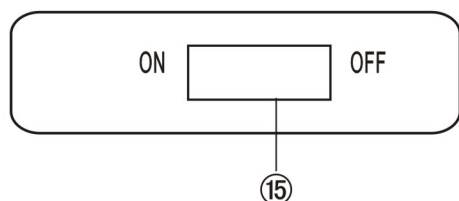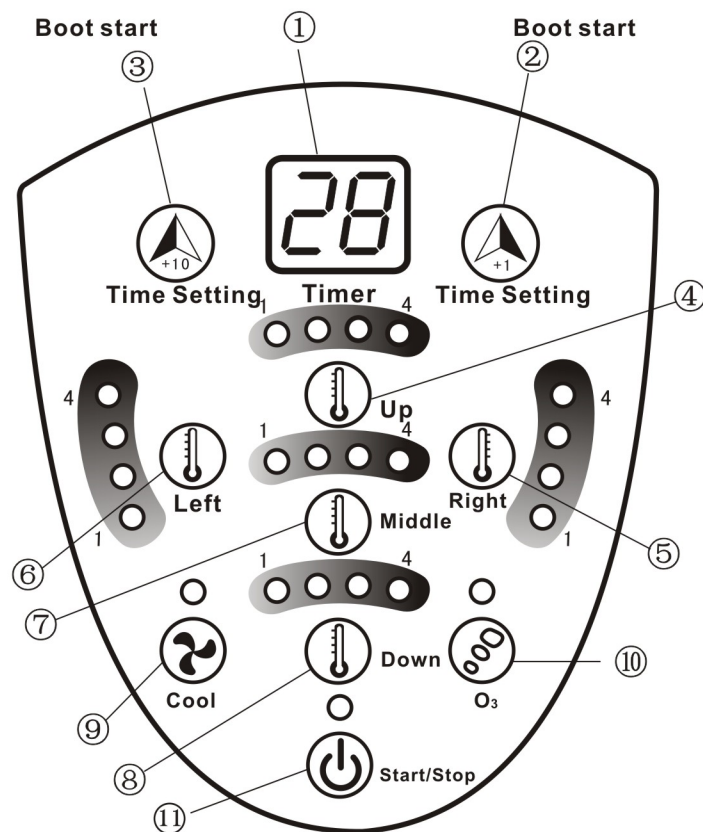


三.Thirdly , installation of swing–arm and machine.

- ① Place one end of the swing-arm onto the wall-arm-adaptor (shown in ill.s.3)
- ② Unscrew the secure-screw, place the covering-ring onto the perpendicular tube, then insert the hanging connector into the perpendicular tube, and line up the groove on the connector to the hole on the tube, finally, put four metal balls into the hole and pull the covering-ring down on top of those metal balls.
- ③ Do the secure-screw up, and then plug the cable to wall power supply.

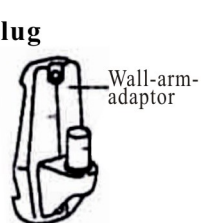


Ill.s. 3

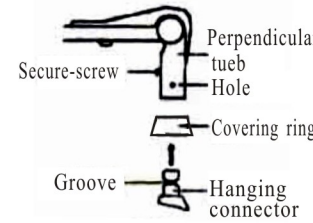


Ill.s. 4

四.Fourthly , adjusting the swing–arm.

- (1) Maximum height setting: in the case when the machine hits ceiling or other furniture, max. height position may be limited in the following way.
 - ① Loosen the nut indicated with an open-ended spanner. Turn the position-setting screw anti-clockwise to drop the height or clockwise to raise height.
 - ② Tighten the nut once desire height was set.

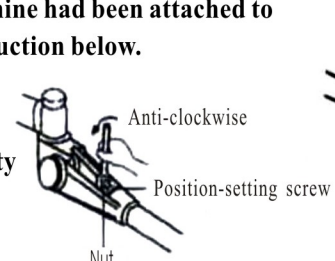


Ill.s. 5

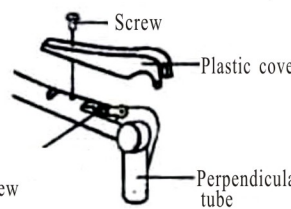

Ill.s. 6

- (2) Perpendicularity adjustment: Perpendicularity can be adjusted if the perpendicular tube is not in its position, once the machine had been attached to the swing-arm, please follow instruction below.
 - ① As illustrated in ill.s.6, undo the screw and detach the plastic cover. Alter perpendicularity using an open-ended spanner.
 - ② Attach the plastic cover after position confirmed.

- (3) Weight balancing adjustment: in the case when the machine cannot be set to a specific position, adjustment process can be made as follows:
As in ill.s.6, detach the plastic cover, pole the stick provided into the balance adjusting nut and rotate. Pull the machine down and let go, if it rises, please loose the nut in order to loose the spring; if it falls, please tight the nut in order to have tighter spring. Assemble the plastic cover after adjustment.

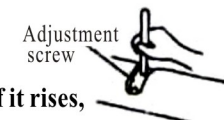

Ill.s. 7

- 1、 Plug the machine to wall power supply, then turn the MAIN POWER SWITCH on.:
 - * When "00" is displayed on the time display window, it means that the machine is ready for operation.
 - * When the circular heating element is not in its initial position, it will return to its default place.
- 2、 Start the operation:
 - * Press STOP/START button to start the operation.
 - * Setting the appropriate temperature and time.
 - * Each button can regulate the temperature of each heating element.
 - * Chose O₃ according to the hair.
 - * Chose cooling key according to the hair style.
- 3、 Turn of the machine:
 - * Press START/STOP key, the time play is "00", the fan will be stoped working affter 3 minutes
- 4、 Cut of timer:
 - * In the case when preset time is up.
 - Buzzer would buzz for five times, indicates that operation is finished, If not chosing "cooling key" meanuhile, the time display is "00".
 - If chosing "cooling key ", buzzer would buzz for two times, the time display us "C0", it indicates the machine is working.
 - The cooling operation can be stopped when press "colling key" or ON/OFF.

 Please unplug the machine after use.

NOTICE

Please check the machine are good , then it can be used.

Functions:


- * There are five separate heating plate, so that it can care hair.
- * O₃ can accelerate skin microcirculation expand the hair kertain and make the nutrition into the hair.

Ionic----it is a colorless and odorless ags, it can make active oxygen promote metabolism, sterilize prevent hair opening fork and messying.

O₃ ----it is a colorless and fresh gas, iy can also make active oxygen promote matabolism sterilize reduce scurf.


Notice:

- * Don't move the machine optionally to prevent hurting the customer when it is working.
- * Don't block the cooling hole of machine.
- * The machine should be stopped working for 15 minutes after a hour.
- * Please check the machine is working well, keep every lamp about 10~20cm be away from the customer

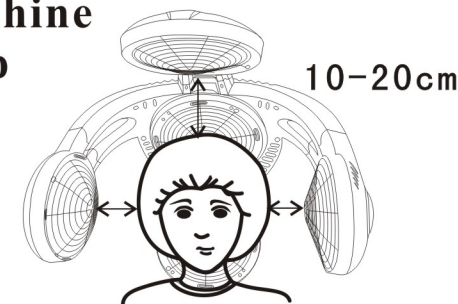

— First,Pre-check before installing the wall swing-arm:

- ① Wall
Please ensure the wall is well-build and sufficient to carry the force and load from the machine.
- ② Height
As illustrated from the picture below, the hanger is recommended to be installed between 1850 2000mm above ground.
- ③ Power supply
There shall be wall plug (220V/50Hz) within 500mm radius of the machine.

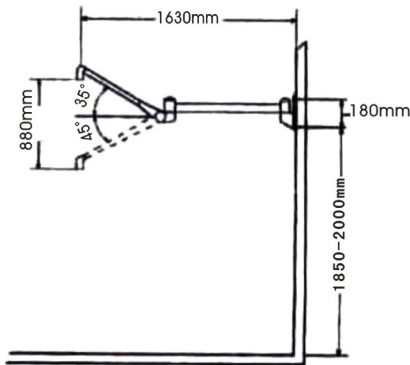


Ills.1

二. Second,installing of the wall arm-adaptor:

- ① Drill holes with.10.5mm diameter, 65mm depth, on the wall, using the wall-arm-adaptor as a template.
- ② Insert cavity into the hole, tighten it up with a nut, make sure the cavity is in the hole properly.
- ③ Place the wall-arm-adaptor onto the cavities. Place in order washer, then spring washer, finally lock down by tighten nut to it.

Caution: Because the wall-arm-adaptor has to carry the load of the whole machine and the swing-arm., as a result, please ensure the installation is accurate and firm, preventing the machine from falling down.

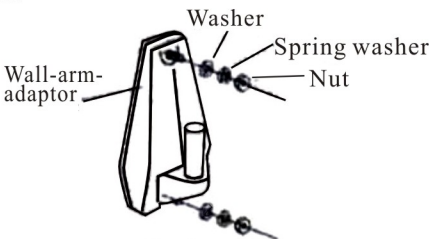

Ills.2

① TIME DISPLAY

28 Shows the operation time set or the remaining operation time. **C0 C1 C2** Cooling in progress.

- ② -----Press once , then time increases a minute.
- ③ -----Press once , then time increases then minute.

④ ⑤ ⑥ ⑦ ⑧---Temperature Lever Key

- * Use this to change the temperature of the hair dryer
- * Pressing(TEMP)switch will change the level each time they are pressed.
- When the indicator light for 1-4 are on,the temperature are highest.
- When the indicator light for 1-4 are on,theheating element stop working,the fan will be off after 90's

Temperature Lever Lamp

Level	0	1	2	3	4
Normal Hood Internal Temperature °(C)		~50℃	~62℃	~73℃	~85℃

- There may be slight variations in the Stand Hood Internal Temperature depending on usage. The Standard Hood Internal Temperature is the temperature at approximately 5 minutes after the start of operation. In operation ober long periods of time,the actual temperature may be slightly higher than that displayed.

⑨ ----- Cooling Key

- * Select wheter or not to use vooing after the heating operation stops.
- * Cooling is on when the lamp is “C0”,“C1”,“C2”.
- * The machine can be stop working when press the button cooling key or START/STOP.

⑩ ----- O₃ Key

- * Select wheter or not to use O₃ function in hair treatment.
- * Accelerate skin microcirculation,expand the hair kertatin.

⑪ ----- Satart/Stop

- * Use this to start the operation of each mode.
- * Use this to stop operation.

Notice

It is a normal phenomenon that the fan will work for 3 mintues after press this button. Please shut off the power after the fan stop work for 3 mintues.