

# OPERATING INSTRUCTIONS

## POWER

Activates Massage System

- \* Turn On: Press PWR.
- \* Turn Off: Press PWR again.
- Green light = 30 minute Timer.
- \* Unit may also be turned on by pressing any ZONE 1-3 key.

To restart after Timer shuts off:

- \* Press PWR or any ZONE 1-3 key.

## ZONES

- 1 - Upper Back
- 2 - Lower Back
- 3 - Hip Region


Any Zone can be made active by pressing that Zone button when operating in the SELECT or PULSE modes. GREEN zone LED's indicate which massage transducers are active at any given instant.

## INTENSITY

Controls INTENSITY during all modes. (+) Increases intensity; (-) Decreases intensity.

## SPEED

Controls pulsing frequency of massage motors in PULSE mode and controls the velocity as it cycles through in WAVE mode. Press (+) to increase and (-) to decrease.

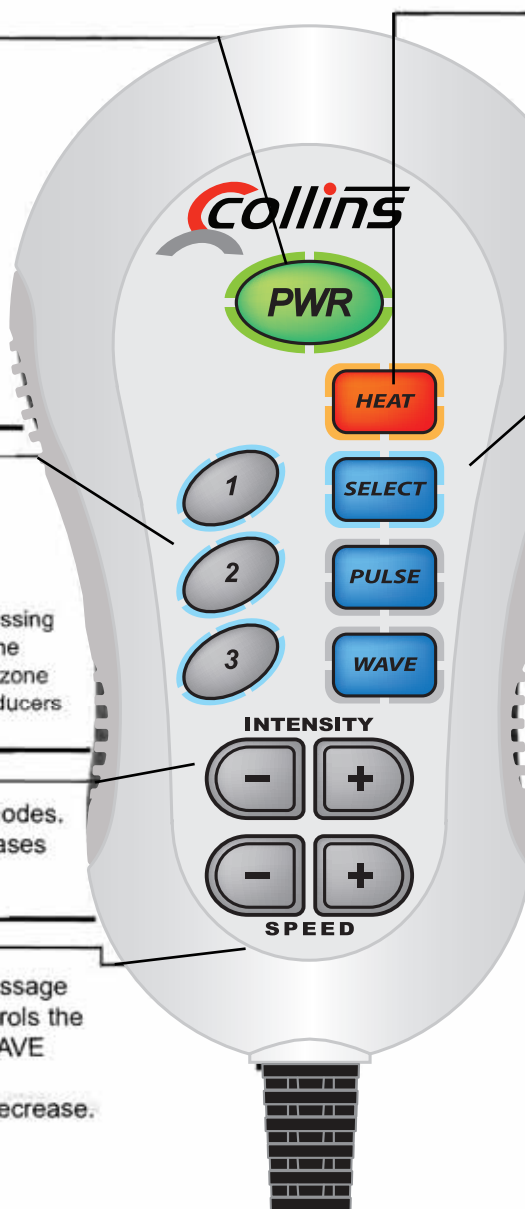

## HEAT

Activates Heat option.

- \* Press once to turn on.
- \* Press again to turn off.

Works with massage or independently.

30 minute Timer

To continue after Timer shuts off, press HEAT button again.

## MODES

(Green light indicates active MODE)

### SELECT -

Lets you choose any or all zones for massage.

- \* Press SELECT.
- \* Press any or all Zones (1-3) to activate.
- \* Press any or all Zones (1-3) to cancel.

### PULSE -

Massage motors turn On and Off to simulate a pulsing action.

- \* Press PULSE.
- \* Press any or all Zones (1-3) to activate.
- \* Press any or all Zones (1-3) to cancel.

### WAVE -

Massage motors move up and down in a wave-like action.

- \* Press WAVE.
- \* Press any or all Zones (1-3) to activate.
- \* Press any or all Zones (1-3) to cancel.

**NOTE:** Constant wand lights indicates that there is active power in the wand and will dim down after 10 seconds of non-use.

**SAVE THESE INSTRUCTIONS!**

# #10171U-47

