


# INSTALLATION INSTRUCTIONS

## NO. 1729 VACUUM BREAKER

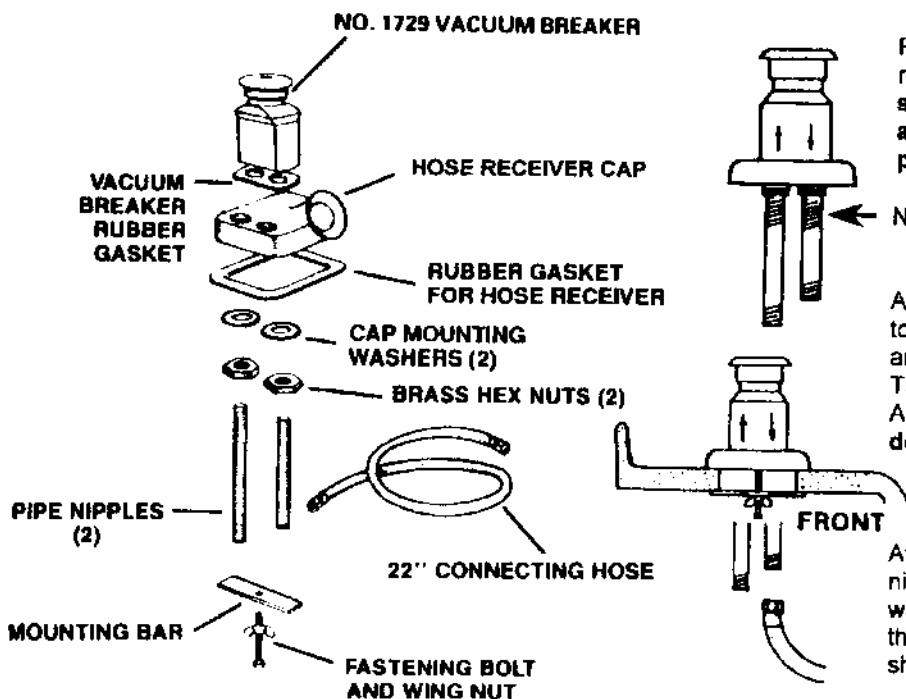

Pre-assemble Vacuum Breaker, hose receiver cap and pipe nipples with the **short pipe installed in line with the arrow on the Vacuum Breaker body pointing down.**


Note: USE TEFLON TAPE ON THREADS

Attach the assembly with rubber gasket to the bowl and place the fastening bolt and wing nut through the mounting bar. Thread bolt in to hose receiver cap. Align and tighten securely by hand only, **do not over tighten.**

Attach connecting hose to the long pipe nipple (arrow pointing up) then to the water outlet on faucet. Insert spray hose through receiver cap and attach to the short pipe nipple (arrow pointing down).

## BASKET STRAINER ASSEMBLY INSTALLATION INSTRUCTIONS

1. Remove all components from strainer body A.
2. Apply a generous amount of plumber's putty to underside of strainer flange.
3. Insert strainer body through drain hole in bowl.
4. Hold strainer body firmly in place while installing under the bowl, first the friction gasket B.
5. Thread on lock-nut C. (hold strainer body firmly in place). Tighten securely using basin wrench.
6. Place flanged tailpiece washer D onto tailpiece and install slipnut E with threads up-wards on tailpiece and screw onto threaded shank of strainer body.
7. Remove excess putty from around strainer flange.

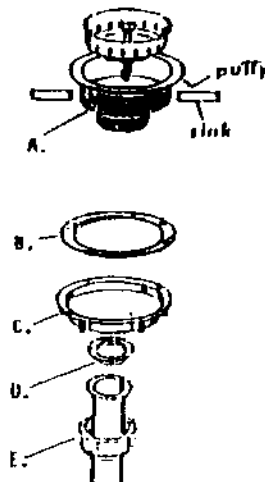

# MARBLE PRODUCTS

A DIVISION OF KOKEN MFG. CO., INC.

2080 S. EDWARDS • WICHITA, KANSAS 67213 • 316-942-7600