


This item is attached to the wall with wood screws. 3" wood screws and decorative washers are provided for wood framed walls. Fasteners for other wall types are to be obtained locally. Screw through the back panel in locations which will be inconspicuous after installation. Suggested locations include: under shelves, behind drawers, and locations hidden by products or supplies.

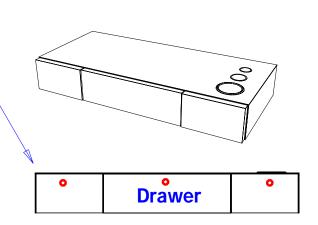


Suggested screw placement shown in red.

Attach mirror supports to wall using the provided wood scews. Supports should be flush to the ends of the unit as depcited. Place screws on the inside edges of the supports as the outer 1 1/2" will be exposed once mirror is in place.

Mount the mirror to supports using the supplied mirror clips.

## Finish Schedule – 460-461

Face Color -Top Color -Toe Color -Reveal / Accent Color -Hardware - N/A Interior - Black Other (Specify) -

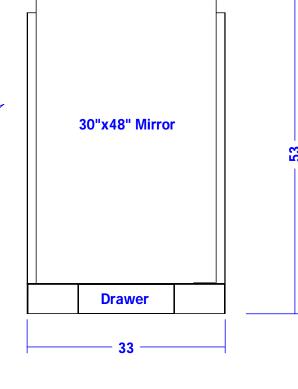

- 23			
	Collins	Collins N 2000 Boy	Manufacturing wser Road
	Collins		Manufacturing wser Road le, TN 38506
	<b>Collins</b> 460-33 & 461-	Cookevil	le, TN 38506
		Cookevil -33 Insta	le, TN 38506