

Adjacent cabinets and components should be assembled by fastening through the interior panels with the screws or bolts provided. Tighten securely.

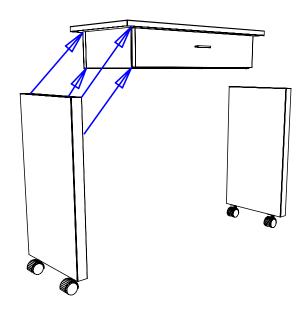

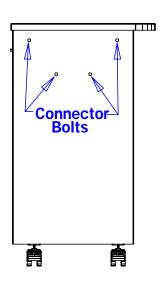

Quantity - 1

Finish Schedule - 517-32-3

Face Color - Wild Cherry

Top Color - Deepstar Slate 1818-35

Toe Color - Black Pulls - Soho Pulls


Interior -

Other (Specify) -

General Notes:


- 1. All counter tops are to be made removable wherever possible.
- 2. Items must be broken into managable sections For Shipping. Mark For Ease Of Reassembly.
- 3. Install Shipping Cleats Wherever Possible To Prevent Shipping Damage.
- 4. Purchased items Must Be Trial Fit Before Shipping.



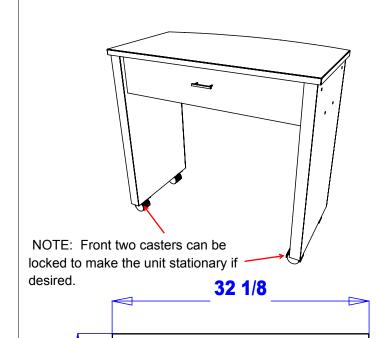

Drawer

28

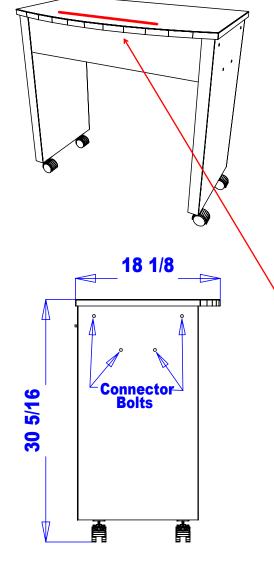

INSTALLATION INSTRUCTIONS

- 1. Flip all knobs/pulls from inside cabinet to outside, reference diagram 1.
- 2. If desired, remove film from velcro, stick velcro in location shown to left, attach wrist pad to talbe using velcro.
- 3. Attach lamp, reference instructions provided with lamp for details.

Quantity -

30 5/16

Finish Schedule

Face Color -

Top Color -

Toe Color -

Pulls -

Interior -

Other (Specify) -

Installation Notes:

- 1. All hardware needed for assembly is included.
- 2. Large items are preassembled at the factory to ensure proper alignment. Items are then disassembled into managable sections for shipping purposes and ease of reassembly.
- 3. Shipping cleats need to be removed before installation. These cleats are installed to prevent damage.

This drawing is the property of Collins Manufacturing Company and is protected under copyright law.

