





STEP 3. Mount crown cap on top of cabinet by screwing (4) 1 1/2" wood screws through top of crown down into cabinet. See detail below.

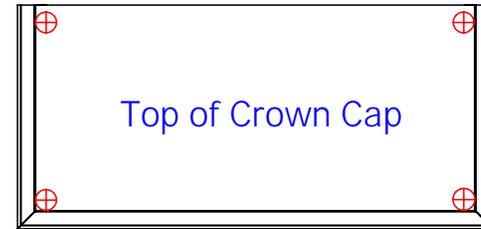

STEP 2. Mount cabinet to base by screwing (4) 1 1/4 wood screws up through the base cleats into the cabinet cleats. Then mount cabinet to wall using (4) 3" wood screws with beauty washers through interior of cabinet at each corner into wall studs.

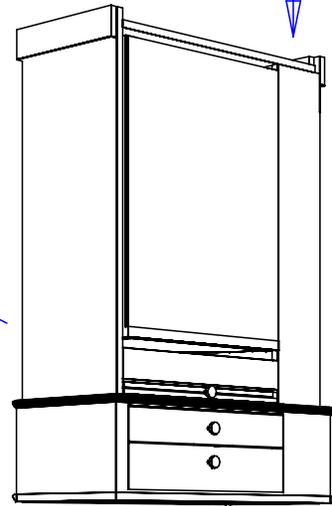

STEP 1. Mount base with legs to wall using (4) 3" wood screws into two wall studs.

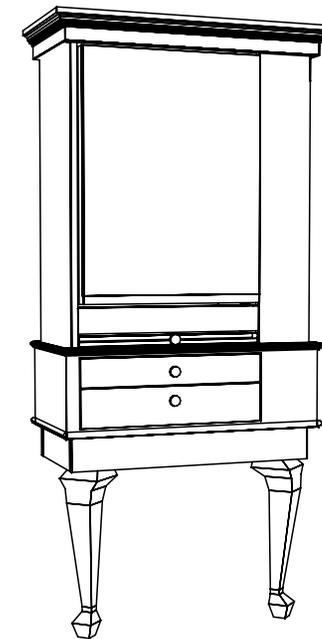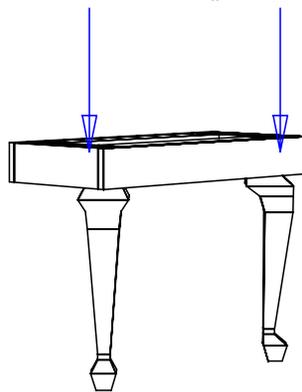




Quantity - Quantity

Finish Schedule - 881-30-1
Face Color - Face Color
Top Color - Top Color
Toe Color - (Specify)
Pulls - Chrome Knobs
Interior - Black
Other (Specify) -

Installation Notes:
1. All hardware needed for assembly is included.
2. Large items are preassembled at the factory to ensure proper alignment. Items are then disassembled into manageable sections for shipping purposes and ease of reassembly.
3. Shipping cleats need to be removed before installation. These cleats are installed to prevent damage.

 Collins Manufacturing 2000 Bowser Rd. Cookeville TN 38506		
Title: Customer Name		
Size:	#: SoNumber	Drawn By: Engineer
Date: 09/14/06	Sheet #: 7	

This unit is provided with an outlet strip. Power for the outlet strip may be brought in through the top, back, or bottom as required.

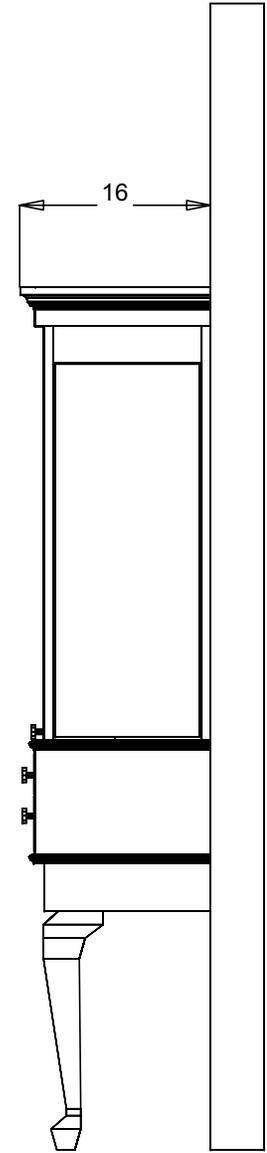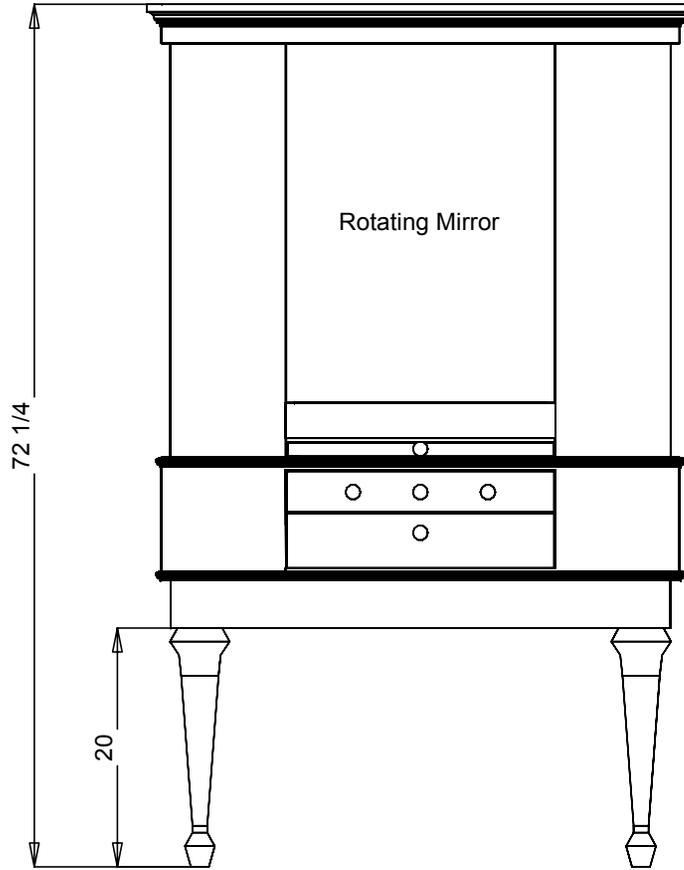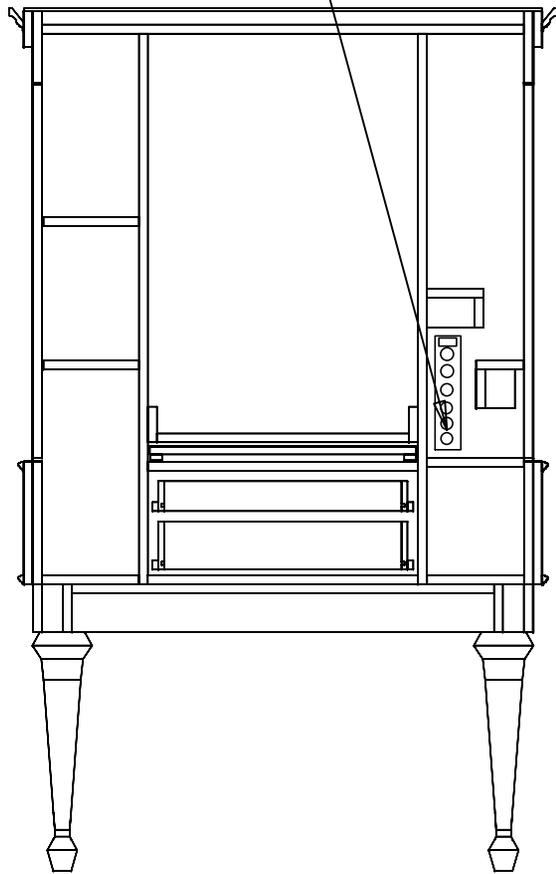

Collins Manufacturing Company
809 E 20th Street
Cookeville TN 38501

Title: 881 Bradford Styling Vanity

Size:

#:

Drawn By:

Mike

Date:

Sheet #: