


## INSTRUCTION

### 3. Back reclining operation instruction

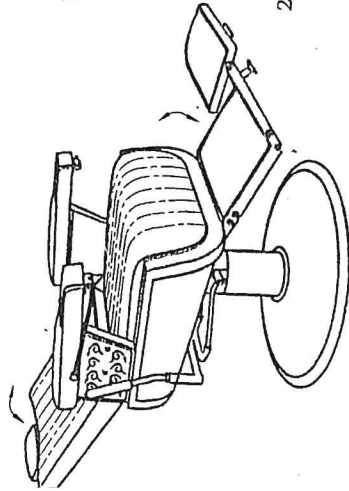


1. To recline the back, push and hold the gas lever by force (<50N) and push down the back to desired angle by another hand. At the same time then let go of the reclining mechanism lever


2. To return the back, push and hold the gas lever, push up the back to desired angle by another hand at the same time.

### 4. Caution for footrest

1. Before getting out of the chair by standing on the footrest make sure the pump is at its lowest point and the footrest rests on the floor.

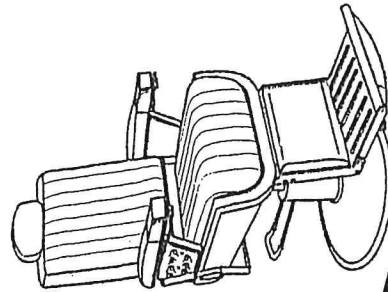


Floor

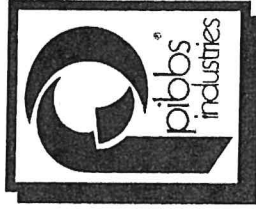

133-15 32<sup>nd</sup> Avenue, Flushing, NY 11354  
Tel. 1 (718) 445-8046 1 (800) 551-5020 Fax 1 (718) 461-3910

# MANUAL

## PROFESSIONAL SALON PRODUCTS

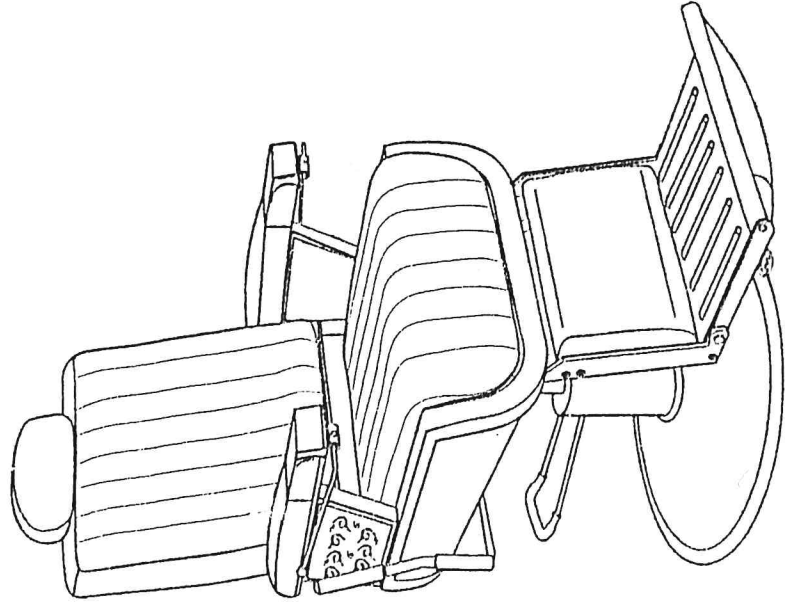


## ATTENTION:


- 1.- These products are applicable for professional hairdressing. Please read carefully before use !
- 2.- When installing the chair- pull upright from the carton using both hands . Please pull up on the footrest level with the bottom of the seat with other hand.
- 3.- The use of the pump: step on the pump lever to rotate the chair, letting the customer sit then, turn towards the mirror . Step on the pedal to raise the chair to the desired height. To lock the pump pull up on the pedal.  
By pressing down on the pedal, the lock is released and the chair will go down, if pedal is pressed all the way down.
- 4.- If the chair has been in transport or stored for an extended period of time, the cushion maybe depressed or "wrinkled" this can be alleviated by using a hairdryer to warm the material and smooth out the material,.
- 5.- Keep the chair away from full sunlight. This will discolor and harden the material. Keep away from the direct flow of the air conditioner
- 6.- Please do not use sharp objects to poke at the chair.(Do not weight limit, put heavy objects on the chair) or sit on the armrest as this will damage the chair.
- 7.- The material of the chair must be protected from direct application of the hairdryer. pen marks, dyed fabrics such as new denim. Plastic covers are recommended.
- 8.- Please clean the chair after use by a client to remove any sweat or moisture. Keep chair dry between uses.
- 9.- Seat only one person at a time. Allowing more than one person on the chair at once will cause damage.
- 10.- Do not pull on loose threads. Use a scissor to cut them off.
- 11.- Do no allow wood parts to come in contact with any harsh chemicals or oils as this will discolor the wood.
- 12.- Please keep the chromed and painted parts clean and dry.

## INSTRUCTION


### 1.- PUMP OPERATION INSTRUCTION

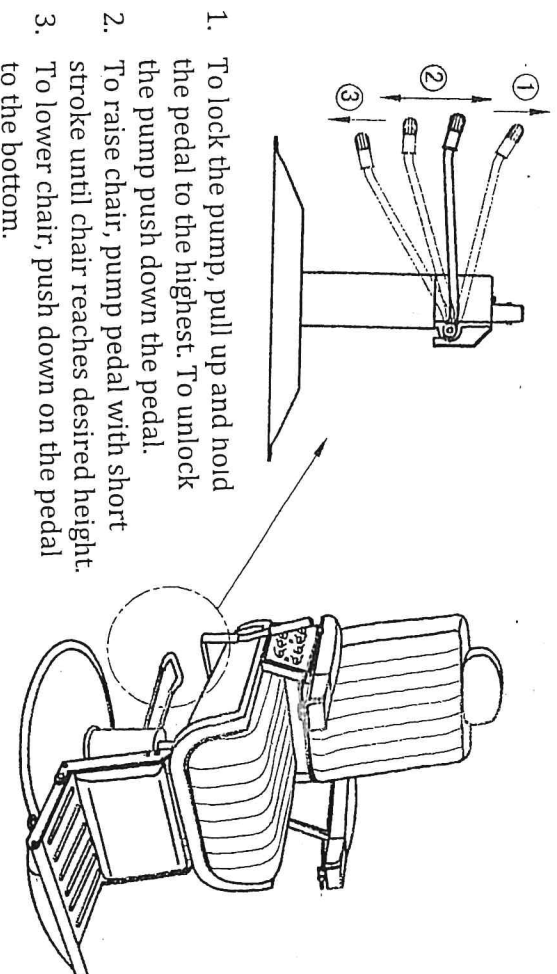

### 2.- HEADREST OPERATION INSTRUCTION

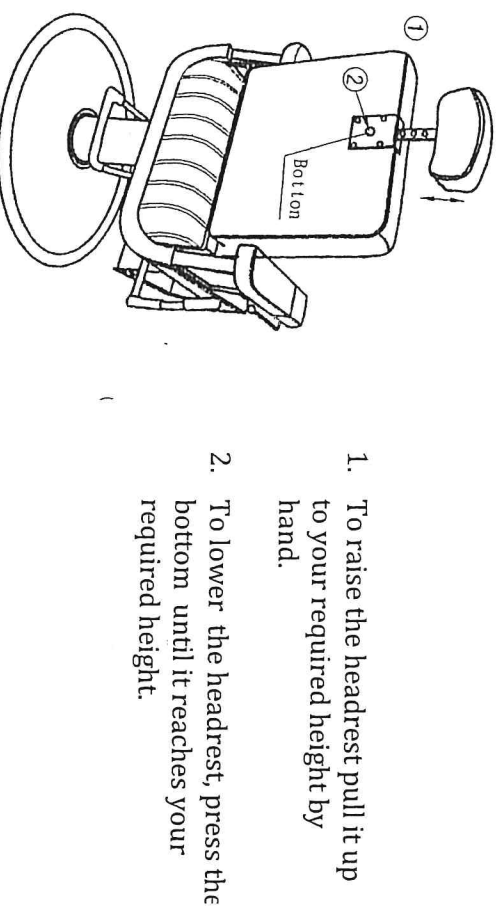


## INSTRUCTION

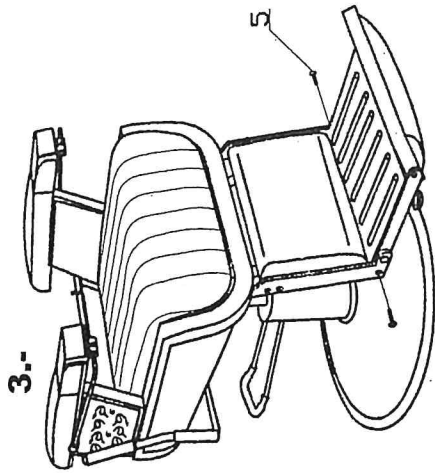

Insert the two side panel with crossed inner screw M8X25 then connect them to the footrest.

4.-

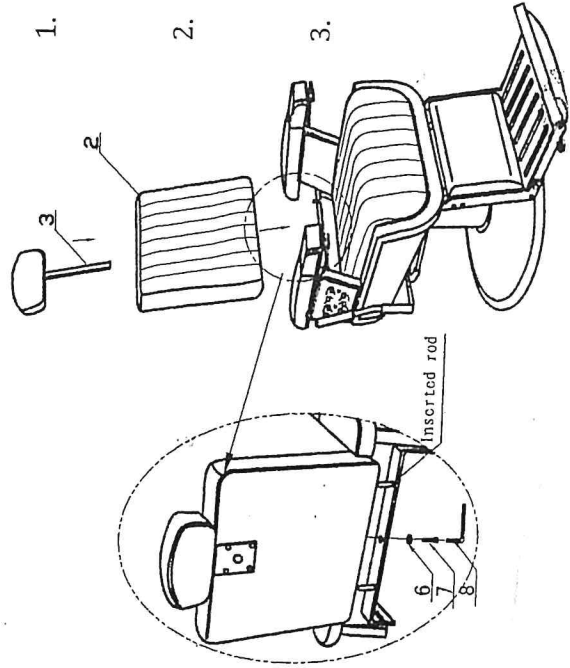

1. Please insert the back on the seat, align the inserted rod make sure the back is in the right direction.
2. After inserting the back, lock the back by 1 pc washer and 1 pc screw M8X45, to tighten up the back.
3. Insert the headrest into the back bracket.

## Shipment and storage.

- 1.- Use caution when transporting.
- 2.- Do not throw cartons when shipping or moving.
- 3.- Transport & open gently to avoid damage.
- 4.- Keep clean and dry during storage.

## Quality assurance.

We will comply with our WARRANTY except for:

- 1.- Misuse of the product
- 2.- Using sharp objects to open carton as this may puncture fabric.
- 3.- Damages caused during shipment is not covered by our Warranty. A claim must be filed with the carrier.


## Disclaimer.

- 1.- We reserve the right to change or modify the product without notice.
- 2.- Photos of the product in catalogs are only representative and are for reference only.
- 3.- We fully stand behind our products and extend the assurance that we are in compliance with any regulations.


# 660 GRANDE

PART LIST  
 BARBER CHAIR  
 INSTALLATION  
 INSTRUCTION

Please confirm below parts before assembly:

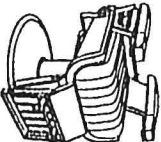- 1 Chair 1pc.....
- 2 Back 1pc.....
- 3 Headrest 1pc.....
- 4 Suspension ring pin 1pc.....
- 5 Screw M8X25 2pcs.....
- 6 Washer M8 1pc.....
- 7 Screw 8x45 1pc.....
- 8 Wrench 1pc.....

## INSTALLATION

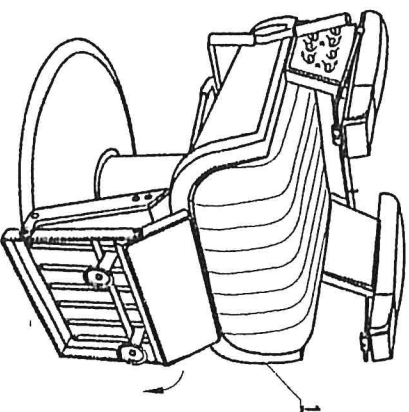

Take the carton apart, turn the footrest over.

