

**Finish Schedule - J30**

Face Color -  
 Top Color -  
 Toe Color -  
 Reveal / Accent Color -  
 Hardware - Chrome Wire  
 Interior -  
 Other (Specify) -



Jeffco  
 5269 U.S. Hwy. 158  
 Advance, NC 27006




Title: **J30 Java Shampoo Bulkhead**

Size: **NTS** Drawing Number: Drawn By: **Brian**

Date: Sheet

This item is attached to the wall with wood screws. 3" wood screws and decorative washers are provided for wood framed walls. Fasteners for other wall types are to be obtained locally. Screw through the back panel in locations which will be inconspicuous after installation. Suggested locations include: under shelves, behind drawers, and locations hidden by products or supplies.

Back splash is to be attached to the wall with screws and/or construction adhesive depending upon the wall type and finish. If screws are used, locate them in inconspicuous locations if possible. Seal any joints between the counter top, splash, and wall with clear silicone.

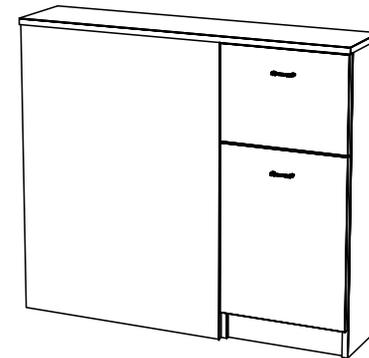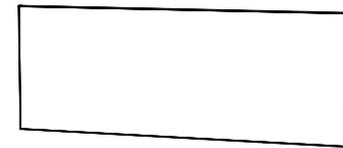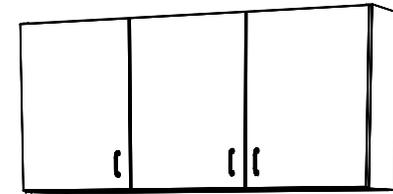

This item is attached is attached to the wall with a French cleat. Remove the wall component of the French cleat from the item and attach it to the wall with the fasteners provided. 3" wood screws are provided for wood framed walls. Fasteners for other wall types are to be obtained locally. The French cleat should be level and at the height required to mount the item at the desired height.

**Finish Schedule - J30**

Face Color -  
 Top Color -  
 Toe Color -  
 Reveal / Accent Color -  
 Hardware - Chrome Wire  
 Interior -  
 Other (Specify) -



Jeffco  
 5269 U.S. Hwy. 158  
 Advance, NC 27006

Title: <b>J30 Java Shampoo Bulkhead</b>		
Size: <b>NTS</b>	Drawing Number:	Drawn By: <b>Brian</b>
Date:	Sheet	