

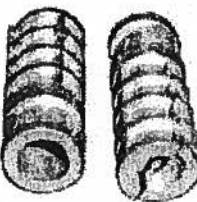
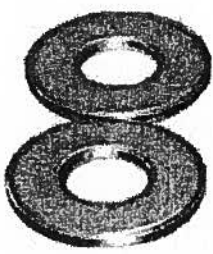









# Mounting Instructions For PIBBS Wall Arm - 1 -

List of Components			
 2 x 3/8" Bolt	 1 x Half-moon Clip	 2 x Rag Pipe	 2 x Washer
 1 x Locking Collar	 1 x Tommy Pin	 1 x Paper Template	
 1 x Screw	 1 x Bracket*	 1 x Wall Arm	

\*The Bracket is supplied with the following units only:

- 133 Misty Hair Steamer with Wall Arm
- 135 Vapotronic Hair Steamer with Wall Arm
- QL954A 4 Headed Lamp with Wall Arm  
(note-bracket is already attached to unit)
- TL944A 3 Headed Lamp with Wall Arm  
(note-bracket is already attached to unit)



# Mounting Instructions For PIBBS Wall Arm - 2 -

## NOTICE:

Installation of the Wall Arm depends upon the type of wall it will be mounted to. We have provided instructions for the following scenarios:

- *Mounting to an existing or new non-cement wall and wall studs.*
- *Mounting to a new cement wall.*
- *Mounting to an existing cement wall*

Please read the instructions carefully and follow the procedure that resembles your specific situation.

*Note: All the components excluding the screw wall arm and paper template are shipped in a little plastic bag within the wall arm box. The screw is attached to the wall arm and the paper template is enclosed with in these instructions.*

## MOUNTING PROCEDURE FOR EXISTING NON-CEMENT WALL

### STEP 1: SETTING MARKERS FOR WALL ARM

TEMPLATE



For this step you will need the following items from the List of Components:

#### 1 x Paper Template

- Locate the area where the wall arm will be placed.
- Locate the Wall Stud. Be sure the stud is 4 x 4 or greater.
- Hold Template against wall exactly where the wall arm will be placed. Be sure that the lower circle in the template is 6 ½ feet above floor level.
- Mark where the holes line up against wall.
- Check markings with a level.

**NOTE: BE SURE THERE IS AN AVAILABLE OUTLET WITHIN REACH OF THE WALL ARM!**

### STEP 2: Install Wall Arm



For this step you will need the following items from the List of Components:

- 2 x Bolts
- 2 x Washers
- 1 x Wall Arm


- Drill holes less than 3/8" at the markings from STEP 1.
- Line up wall arm with newly drilled holes.
- Using the Bolts and the Washers secure Wall Arm to the wall.

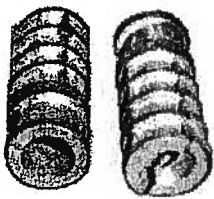
**NOTE: BE SURE THAT THE WALL STUD CAN SUPPORT ITS WEIGHT. ALSO BE SURE TO HAVE ONE PERSON HOLD THE WALL ARM WHILE ANOTHER SECURES IT TO THE WALL!**

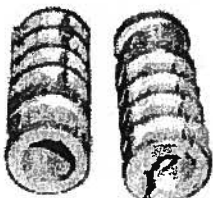


# Mounting Instructions For PIBBS Wall Arm - 3 -

## MOUNTING PROCEDURE FOR EXISTING CEMENT WALL

STEP 1: SETTING MARKERS FOR WALL ARM	
<p><b>TEMPLATE</b></p> 	<p>For this step you will need the following items from the List of Components:</p> <p style="text-align: center;"><b>1 x Paper Template</b></p> <ul style="list-style-type: none"> <li>• Locate the area where the wall arm will be placed.</li> <li>• Hold Template against wall exactly where the wall arm will be placed. Be sure that the lower circle in the template is 6 ½ feet above floor level.</li> <li>• Mark where the holes line up against wall.</li> <li>• Check markings with a level.</li> </ul> <p><i>NOTE: BE SURE THERE IS AN AVAILABLE OUTLET WITHIN REACH OF THE WALL ARM!</i></p>


STEP 2: Install Wall Arm	
	<p>For this step you will need the following items from the List of Components:</p> <p style="text-align: center;"><b>2 x Bolts</b> <b>2 x Rag Pipes</b> <b>2 x Washers</b> <b>1 x Wall Arm</b></p> <ul style="list-style-type: none"> <li>• Drill holes 3/8" at the markings from STEP 1.</li> <li>• Insert Rag Pipe into newly drilled holes</li> <li>• Line up wall arm with Rag Pipes.</li> <li>• Using the Bolts and the Washers secure Wall Arm to the wall.</li> </ul> <p><i>NOTE: The Rag Pipes expand when the bolts are inserted.</i></p> <p>If bolts cannot be completely tightened go on to Step 3.</p>

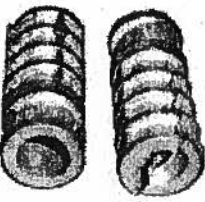
STEP 3: Install Wall Arm	
	<p>For this step you will need the following items from the List of Components:</p> <p style="text-align: center;"><b>2 x Bolts</b> <b>2 x Rag Pipes</b> <b>2 x Washers</b> <b>1 x Wall Arm</b></p> <ul style="list-style-type: none"> <li>• Drill holes bigger than 3/8" at the markings from STEP 1.</li> <li>• Apply fresh cement to newly drilled holes.</li> <li>• Insert Rag Pipe into cement.</li> <li>• Screw the bolts in to the rag pipes until completely tightened.</li> <li>• Let cement dry then remove bolts.</li> <li>• Using the Bolts and the Washers secure Wall Arm to the wall.</li> </ul> <p><i>NOTE: The Rag Pipes expand when the bolts are inserted.</i></p>

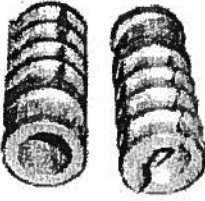


# Mounting Instructions For PIBBS Wall Arm - 4 -

## MOUNTING PROCEDURE FOR A NEW CEMENT WALL

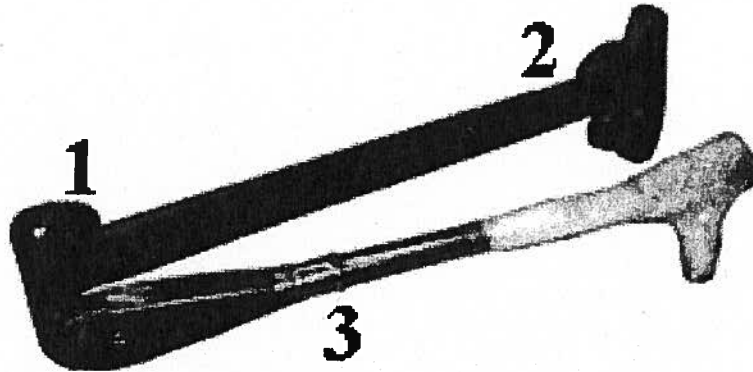
STEP 1: SETTING MARKERS FOR WALL ARM	
<b>TEMPLATE</b> 	<p>For this step you will need the following items from the List of Components:</p> <p style="text-align: center;"><b>1 x Paper Template</b></p> <ul style="list-style-type: none"><li>• Locate the area where the wall arm will be placed.</li><li>• Hold Template against wall exactly where the wall arm will be placed. Be sure that the lower circle in the template is 6 ½ feet above floor level.</li><li>• Mark where the holes line up against wall.</li><li>• Check markings with a level.</li></ul> <p style="text-align: center;"><i>NOTE: BE SURE THERE IS AN AVAILABLE OUTLET WITHIN REACH OF THE WALL ARM!</i></p>

STEP 2: Insert Rag Pipes	
	<p>For this step you will need the following items from the List of Components:</p> <p style="text-align: center;"><b>2 x Bolts</b> <b>2 x Rag Pipes</b></p> <ul style="list-style-type: none"><li>• Insert Rag Pipes at the markings from STEP 1.</li><li>• Insert bolts completely into Rag Pipes</li><li>• Let wall dry.</li><li>• Remove bolts from Rag Pipes.</li></ul> <p style="text-align: center;"><i>NOTE: The Rag Pipes expand when the bolts are inserted.</i></p>

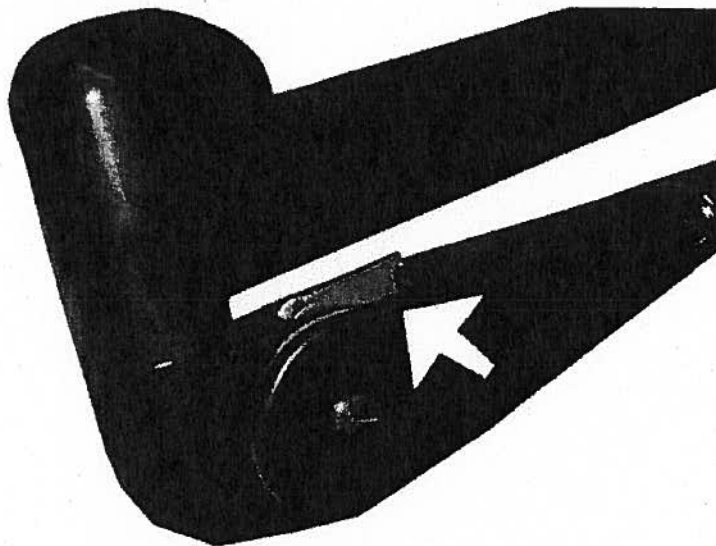
STEP 3: Install Wall Arm	
	<p>For this step you will need the following items from the List of Components:</p> <p style="text-align: center;"><b>2 x Bolts</b> <b>2 x Washers</b> <b>1 x Wall Arm</b></p> <ul style="list-style-type: none"><li>• Using the Bolts and the Washers secure Wall Arm to the wall.</li></ul> <p style="text-align: center;"><i>NOTE: The Rag Pipes expand when the bolts are inserted.</i></p>



***ADJUSTING THE WALL ARM TENSION LEVEL***



If you want to set the Wall Arm tension to the desired level first you need to identify which joint needs adjusting. The joints labeled 1 and 2 in the above diagram control the horizontal swivel of the arm, while joint 3 controls the vertical spring. To set the horizontal tension level, first remove the cap from either joint 1 or 2. Either tighten or loosen the screw according to your needs. To set the vertical spring tension, first move the covering collar located at area 3 of the above diagram. Underneath are two holes. Using the Tommy Pin supplied in the components packaging you can either tighten or loosen the spring's tension level.



To release the Wall Arm from its packing position remove the metal packing plate shown in the above image. This packing plate is installed to stop the Wall Arms vertical motion.

***NOTE: DO NOT REMOVE THE METAL PACKING PLATE BEFORE MOUNTING THE WALL ARM!!***



# WARNING

WE AT PIBBS INDUSTRIES THANK YOU FOR YOUR ORDER OF ONE OF OUR PROFESSIONAL HAIR DRYERS. YOU HAVE ORDERED AN EXCELLENT, HIGH PERFORMANCE HAIR DRYER. PLEASE BE AWARE THAT THIS IS NOT AN "AIR CONDITIONED" TYPE DRYER WITH GENTLE AIR CIRCULATION. THIS DRYER HAS A POWERFUL TOP MOUNT MOTOR AND FAN, WHICH CIRCULATES THE AIR WITHIN THE HOOD, AND AS A RESULT, WILL DRAW LOOSE HAIR INTO THE FAN. THEREFORE, THIS DRYER MUST BE USED WITH A HAIR NET WHEN WORKING WITH LOOSE HAIR OR LONG HAIR THAT IS NOT PINNED, AS IN A ROLLER SET. IT CAN ALSO BE USED AS A SOURCE OF HEAT TO ENHANCE CHEMICAL PROCESSES WHERE THE HAIR IS COVERED WITH PLASTIC OR FOIL.

PIBBS INDUSTRIES IS NOT RESPONSIBLE FOR THE MISUSE OF ANY OF OUR PRODUCTS.






# Mounting Instructions For PIBBS Wall Arm - 7 -

## ATTACHING THE APPLIANCE

There are two different ways to attach one of our appliances to our wall arm. The difference depends on which appliance you purchased. If you purchased the **511, 513** or **515** Professional Hair Dryer then proceed to the instructions that begin on this page. If you have purchased the **131, QL954A** or **TL944A** then proceed to the next section titled **ATTACHING THE BRACKET**.


The following instructions are for the **511, 513** and **515** dryers only!

STEP 1: Attaching the Locking Collar	
	<p>For this step you will need the following items from the List of Components:</p> <p><b>1 x Screw</b> <b>1 x Locking Collar</b> <b>1 x Mounted Wall Arm</b></p> <ul style="list-style-type: none"><li>• Remove the screw from the Wall Arm. The screw is located on the short shaft on the end of the unit that is not mounted to the wall.</li><li>• Slide the Locking Collar onto the shaft.</li></ul>

STEP 2: Attaching the Dryer	
	<p>For this step you will need the following items from the List of Components:</p> <p><b>1 x Half Moon Clip</b> <b>1 x 511, 513 or 515 Dryer</b></p> <ul style="list-style-type: none"><li>• Locate the Mounting Yoke at the top of your dryer. Attached there will be a chrome connection piece that looks like the following: </li><li>• Insert the Connection Piece into the Shaft located at the end of the Mounted Wall Arm. To secure it insert the Half Moon Clip into the groove. Use the following image as a guide.</li></ul>





# Mounting Instructions For PIBBS Wall Arm - 8 -

	<p>Slide the <b>Locking Collar</b> over the <b>Half Moon Clip</b> and return the screw to its original location.</p>
-----------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------

## **ATTACHING THE BRACKET**

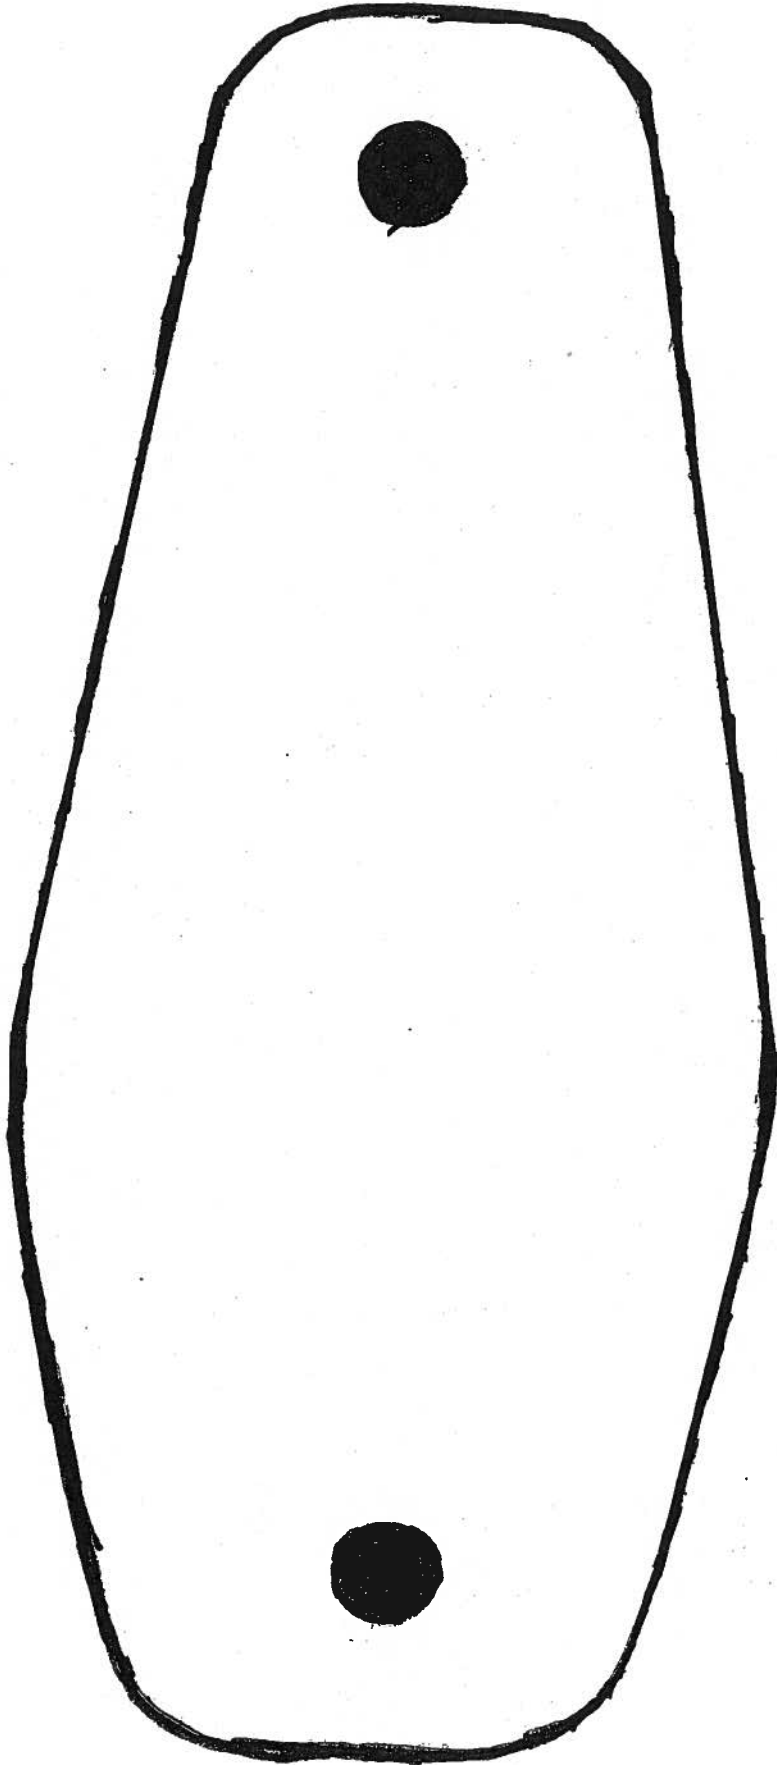
The Bracket is used for the 131, QL954A and TL944A units.

<p><b>STEP 1: Attaching The Locking Collar</b></p>	
	<p>For this step you will need the following items from the List of Components:</p> <p><b>1 x Screw</b> <b>1 x Locking Collar</b> <b>1 x Mounted Wall Arm</b></p> <ul style="list-style-type: none"><li>• Remove the screw from the Wall Arm. The screw is located on the short shaft on the end of the unit that is not mounted to the wall.</li><li>• Slide the Locking Collar onto the shaft.</li></ul>

<p><b>STEP 2: Attaching the Bracket</b></p>	
	<p>For this step you will need the following items from the List of Components:</p> <p><b>1 x Half Moon Clip</b> <b>1 x Bracket</b></p> <ul style="list-style-type: none"><li>• Locate the connection end of the bracket. The connection end is the top seen in the picture to the left.</li><li>• Insert the Connection End into the Shaft located at the end of the Mounted Wall Arm. To secure it insert the Half Moon Clip into the groove. Slide the Locking Collar over the Half Moon Clip and return the screw to its original location.</li></ul>



**TEMPLATE**



**TEMPLATE**