



Siesta Chairs



SIESTA



4000978

belvedere


Perfect design. Personal service.



WHY SIESTA?

Siesta Backwash and Conventional

Congratulations. You have purchased the most advanced and comfortable shampoo seating system available. The Siesta is ergonomically designed. The seat adjusts at an angle to maintain proper alignment between the bowl and the client. This provides a consistent level of comfort throughout the adjustment range. The fixed seat cushion-to-backrest angle provides a feeling of security as well.

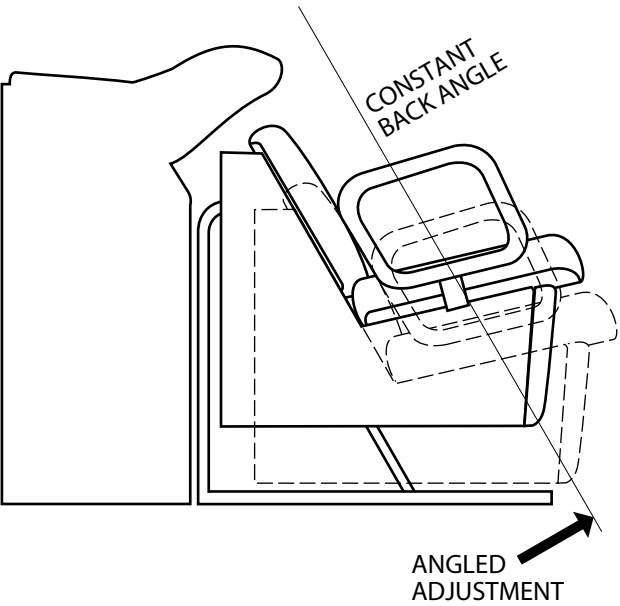

The Siesta chair adjusts to accommodate more than 90% of all salon clients without cumbersome pumps. Siesta's constant back angle positions the client properly, regardless of the seat height.

CARE AND CLEANING


Your Siesta chair requires minimal maintenance. Clean the vinyl fabric with soap and water. Avoid harsh cleaners or solvents.

Do not attempt to service or disassemble the gas-spring lift mechanism. Call your service technician.

USING SIESTA (PNEUMATIC LIFT)


Pull up on the release trigger and allow the chair to rise to the highest position before seating the client.

Note: The chair rises ONLY when unoccupied. With the chair all the way up, seat the client.

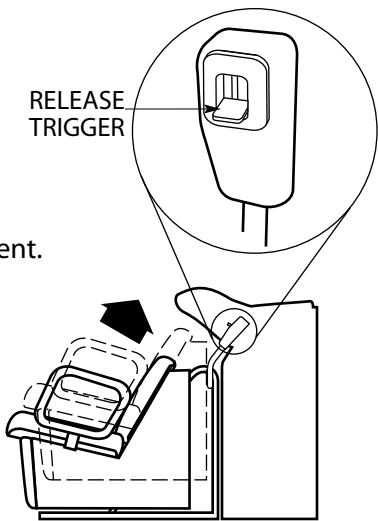

You or the client may raise the legrest. Grasp the handle and pull back. Caution: The legrest is spring-loaded. Note: Clients wearing dresses may want a towel or cape over their legs.

Now pull the height-control release trigger gently until the client is properly positioned. The chair will go down only with a person in it. If you go too far, have the client stand up. Then raise the chair as above and start over.

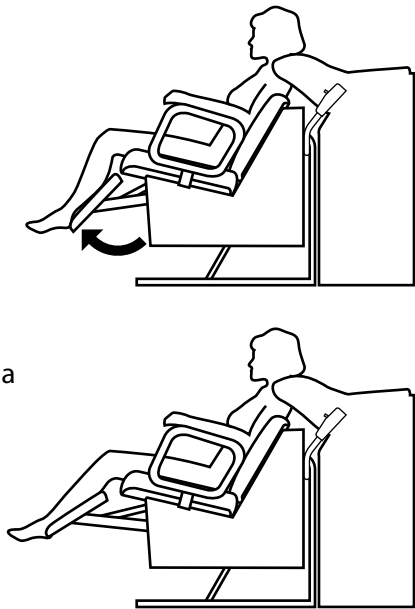

When the shampoo service is completed, LOWER the chair to allow the client to exit the chair easily. Heavier clients will lower the chair slightly faster than petite clients. Push the lever handle forward to lower the legrest to exit.

IMPORTANT! (SIESTA PNEUMATIC ONLY)

The chair should be moved to the **LOWEST** position to allow the client to exit when the shampoo service is completed.

If the chair is not lowered after each service, it could suffer excessive stress and wear resulting in damage not covered by the published warranty.


Produced by: J. Baer	Date: 06/06	Amended: 02/07	Version: 1	Shampoo Seating System	Siesta
----------------------	-------------	----------------	------------	------------------------	--------

USING ELECTRIC SIESTA


The SR24 electric Siesta comes with a ten-foot power cord. The unit must be plugged into a GFCI (Ground Fault Circuit Interrupter) circuit or outlet. The GFCI should be installed by a qualified electrician. The outlet may be located on the wall or in the floor according to local electrical codes. Electrical requirements: 115V, 100 watts.

The electric Siesta uses an electric actuator system to move the chair up and down. It is operated by a two-button corded remote control. Push the up or down button on the handset to position the client.


REMOTE CONTROL

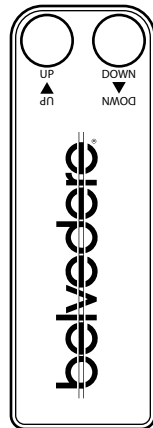

The hook molded on the back of the electric Siesta remote control fits into a plastic loop on the back of the Belvedere S54 backwash station. If the Siesta is used with other shampoo systems, the remote can be hooked onto any other convenient location.

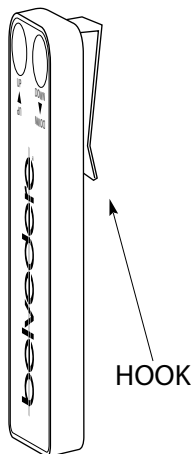


Before seating the client, push the down button on the remote to move the chair to the LOWEST position.

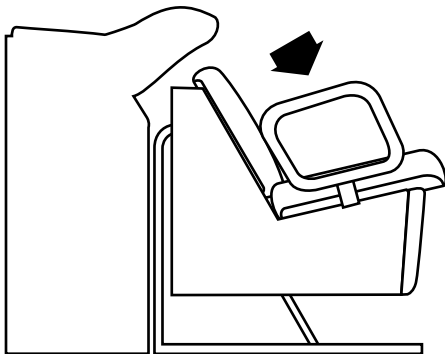

Seat the client in the chair. Then push the up button on the remote control until the client is properly positioned. The stylist or client may pull the lever handle back to raise the legrest.

Note:


Clients wearing dresses may want a towel or cape over their legs.

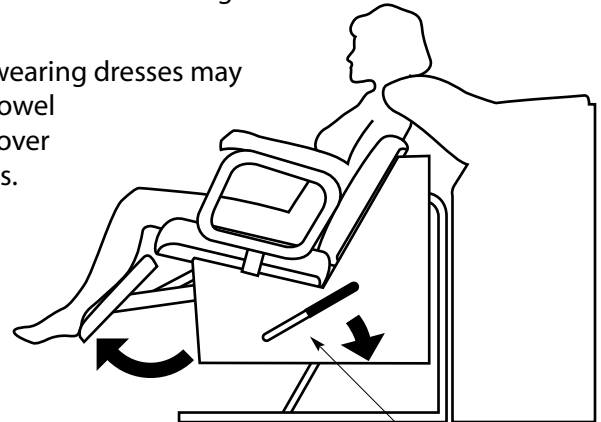

PULL LEVER TO RAISE LEGREST

When the shampoo is complete, push the down button on the remote to move the chair to the lowest position. Push the lever handle forward to lower the legrest to exit.

LOWER CHAIR TO EXIT


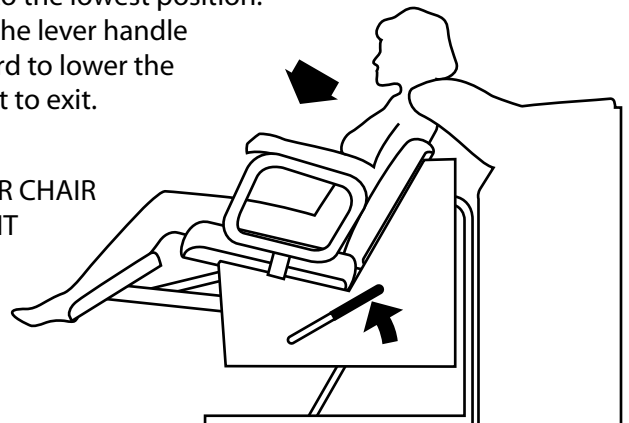


IMPORTANT! (ELECTRIC SIESTA ONLY)



The chair should be in the LOWEST position:

- when the shampoo service begins, and...
- when the shampoo service is completed.



If the chair is not lowered after each service, it could suffer excessive stress and wear resulting in damage not covered by the published warranty.

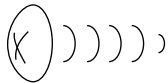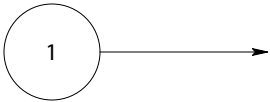



Wood screw or other fastener suitable for wall or bulkhead construction (SR14, SR34 only) obtain locally.




Lead anchor or other anchor suitable for wall construction (no bulkhead cabinet used SR14, SR34 only) obtain locally.

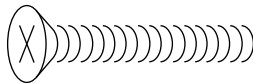



1 / 4 - 20 Flat Phillips-head screw

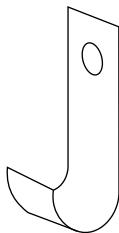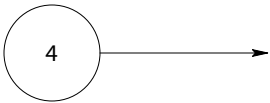



J-Hook (2)



Hanger Loop



#8 x 1-1/4" Pan head Phillips screw (2)



#2 Phillips screwdriver



Produced by: J. Baer	Date: 06/06	Amended: 02/07	Version: 1	Shampoo Seating System	Siesta
----------------------	-------------	----------------	------------	------------------------	--------

SIESTA CHAIR ASSEMBLY

IMPORTANT NOTE:

Your Siesta chair is shipped with the lift mechanism disconnected from the chair to avoid possible damage caused by mishandling in shipping. Follow the directions below to connect the lift mechanism to the chair.

1. Remove the Siesta chair from the carton.
CAUTION! To avoid damage to the upholstery, do not use a knife to open the carton.
2. Carefully remove the protective packing materials.
3. Remove the back panel from the chair by unscrewing four (4) Phillips screws holding the back panel in place.
4. Use a wire cutter or side cutter to cut and remove the plastic "zip-tie" holding the top of the lift mechanism to the chair frame.
5. Pull the retaining clip out of the pin and remove the pin from the bracket on the chair.
6. To connect the lift mechanism to the chair:
 - a. Have a helper pull the chair up on the frame until the bracket is even with the black plastic fitting on the top of the lift mechanism.
 - b. Align the black plastic fitting with the bracket.
 - c. Insert the pin through the bracket and the fitting.
 - d. Push the retaining clip through the hole in the end of the pin to keep it from sliding out of the bracket.
7. Replace the back panel.

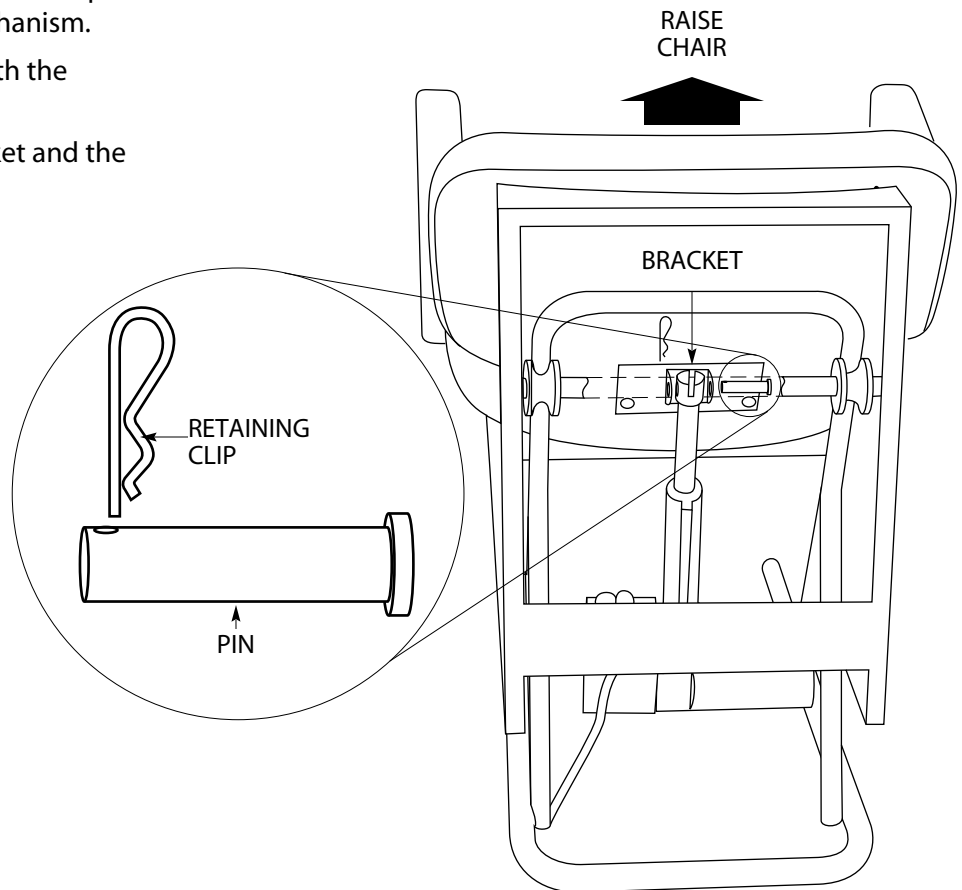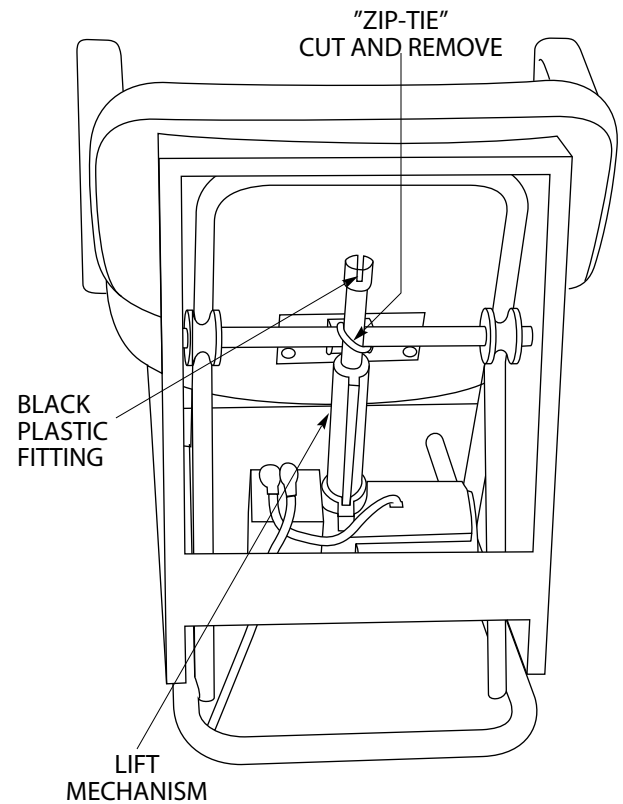

Produced by: J. Baer	Date: 06/06	Amended: 02/07	Version: 1	Shampoo Seating System	Siesta
----------------------	-------------	----------------	------------	------------------------	--------

SIESTA CHAIR INSTALLATION


1. Remove the Siesta chair from the carton. **CAUTION!** To avoid damage to the upholstery, do not use a knife to open the carton.
2. Carefully remove the protective packing from the control.

S54 Backwash Units:


3. Fasten two J-hooks to the front of the S54 backwash cabinet with two machine screws provided.

NOTE: The pre-drilled holes in the front of the cabinet are equipped with T-nuts.

4. Place the back tube of the Siesta chair frame into the J-hooks.

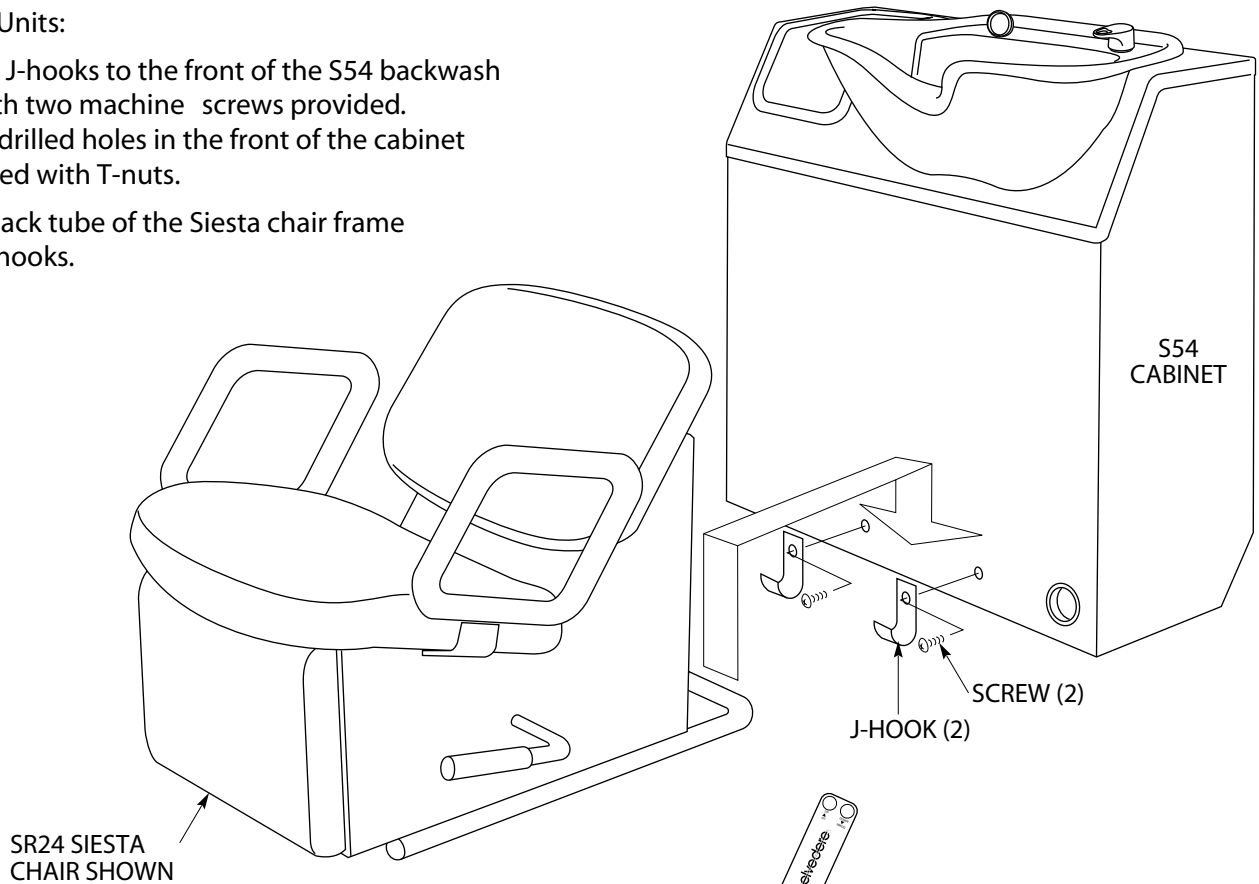

5. Route the remote control through the grommets in the front and back of the S54 cabinet. The remote may be hung on the plastic loop on the back of the S54.

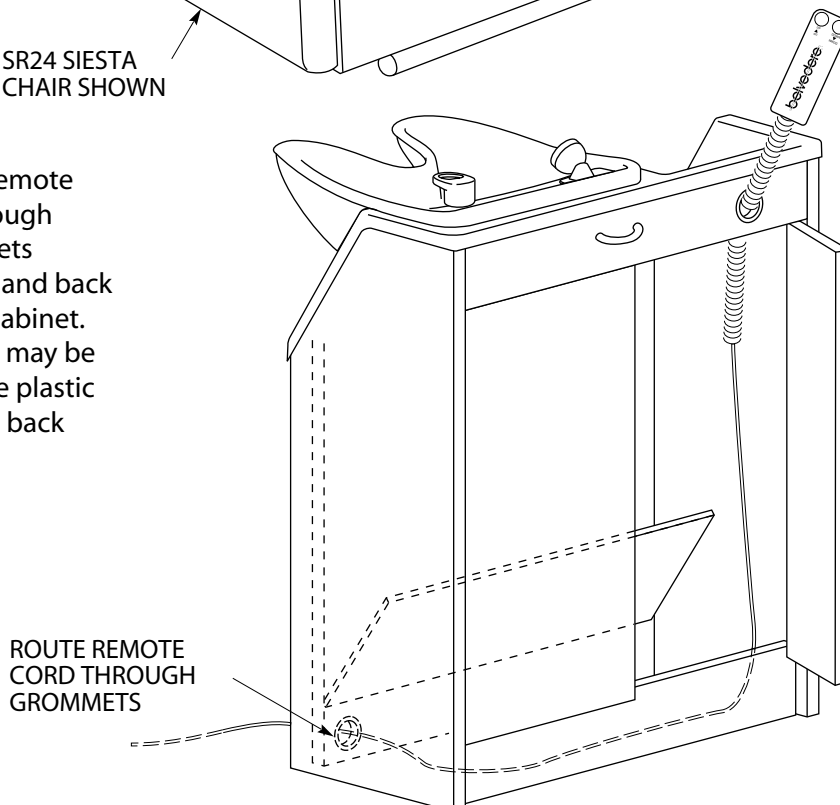

The SR24 and SR34 electric Siestas come with a 10-foot power cord. The unit must be plugged into a GFCI (Ground Fault Circuit Interrupter) circuit or outlet. The GFCI should be installed by a qualified electrician. The outlet may be located on the wall or in the floor according to local electrical codes. Electrical requirements: 115 volts, 100 watts.


Produced by: J. Baer	Date: 06/06	Amended: 02/07	Version: 1	Shampoo Seating System	Siesta
----------------------	-------------	----------------	------------	------------------------	--------

SIESTA CHAIR INSTALLATION


1. Remove the Siesta chair from the carton. CAUTION! To avoid damage to the upholstery, do not use a knife to open the carton.
2. Carefully remove the protective packing from the control.

NL54 Nile Backwash Units:

6. Fasten two J-hooks to the front of the NL54 backwash cabinet with two 3/4" long wood screws provided.
7. Place the back tube of the Siesta chair frame into the J-hooks on the front of the Nile backwash cabinet.
8. The hanger-loop for the remote control may be fastened to the cabinet. Drill two holes, 3/16" diameter, 1-9/16" apart at a convenient location. Fasten the hanger loop with two screws provided.

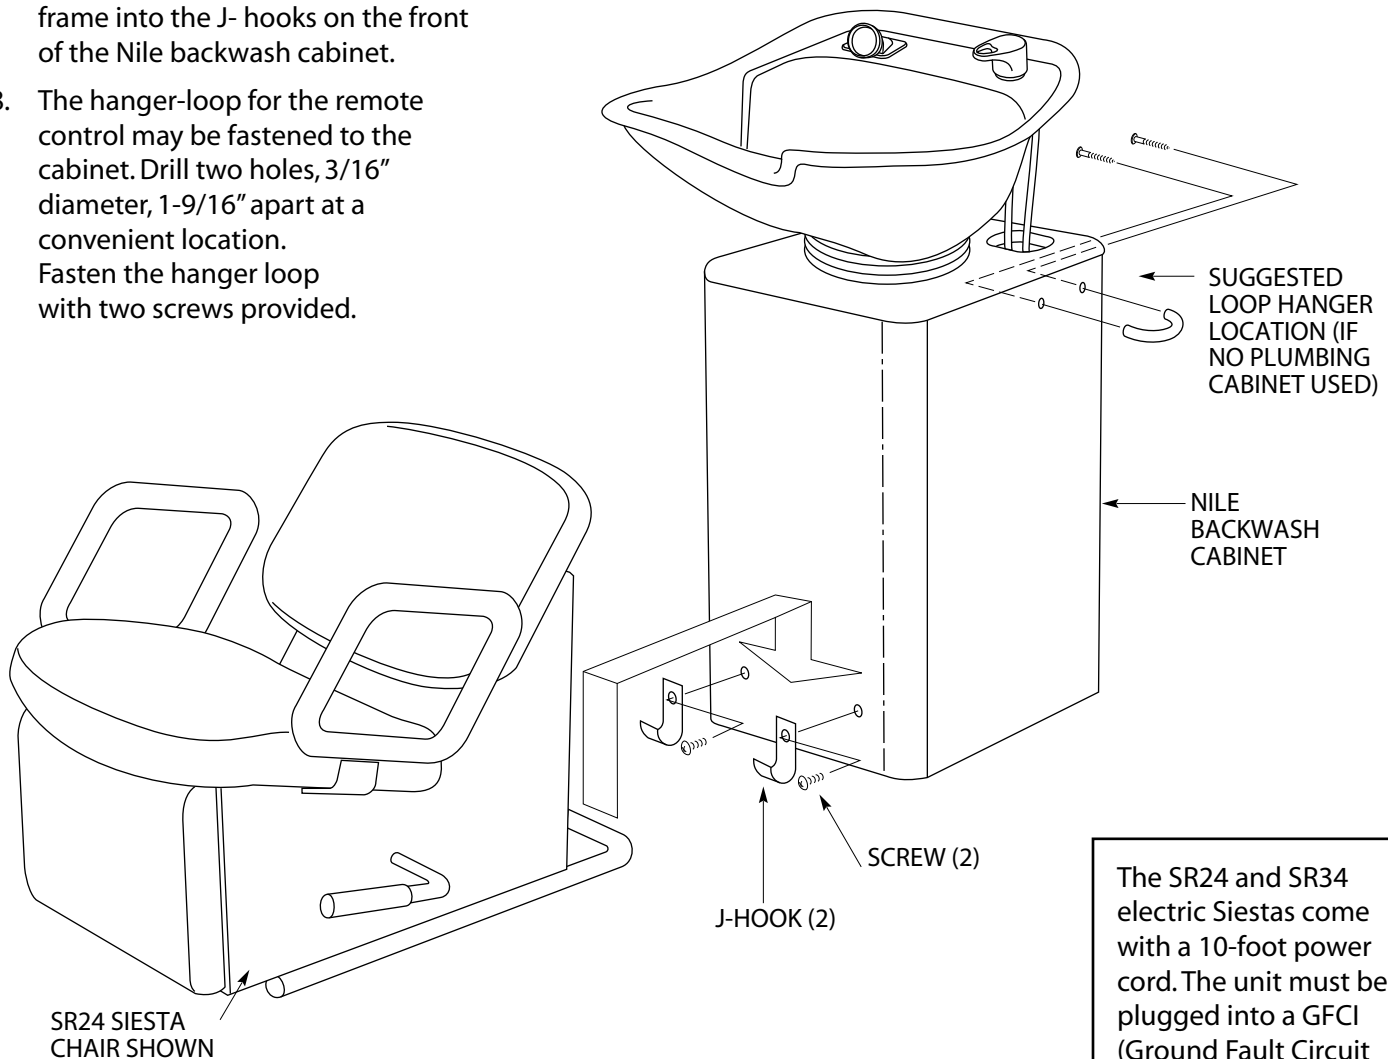

DRILL PATTERN FOR HANGER LOOP

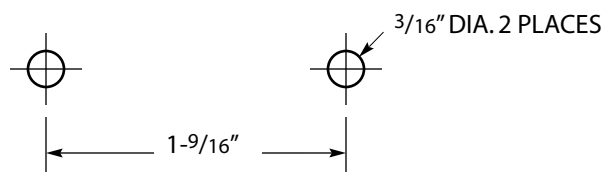

Produced by: J. Baer	Date: 06/06	Amended: 02/07	Version: 1	Shampoo Seating System	Siesta
----------------------	-------------	----------------	------------	------------------------	--------

SIESTA CHAIR INSTALLATION

Conventional (Side wash) Units:


NOTE: If installing he Siesta in front of a wall (no bulkhead or shampoo bowl mounting cabinet is used) you must secure the chair to the wall with fasteners appropriate for your wall construction. Obtain these fasteners locally.

9. Place the Siesta chair in front of the bulkhead or wall. The mounting plates at the back of the Siesta frame should be against the shampoo bulkhead or wall. Be sure the Siesta chair is centered under the bowl. Mark the locations of the mounting plate screw holes on the bulkhead or wall.


10. Move the chair aside and drill holes for the fasteners:

- a. Bulkhead or shampoo cabinet: pilot holes (1/16" dia. x 1/4" deep).
- b. Wall: size appropriate for your fasteners.

11. Drive wood screws provided (or your fasteners) through the holes in the mounting plates and into the bulk-head or wall.

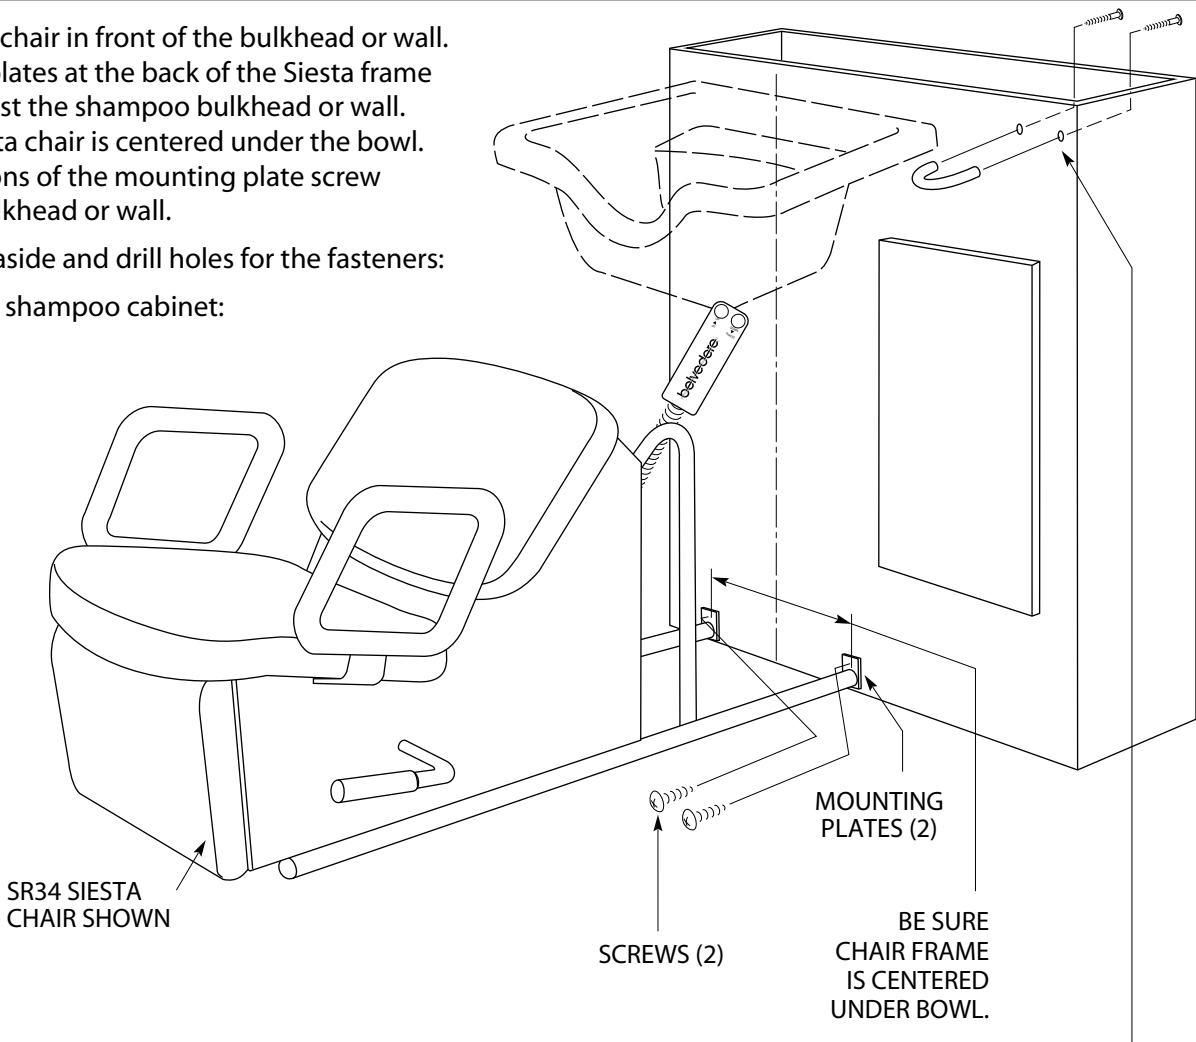

12. The hanger-loop for the remote control may be fastened to the cabinet. Drill two holes, 3/16" diameter, 1-9/16" apart at a convenient location. Fasten the hanger loop with two screws provided.

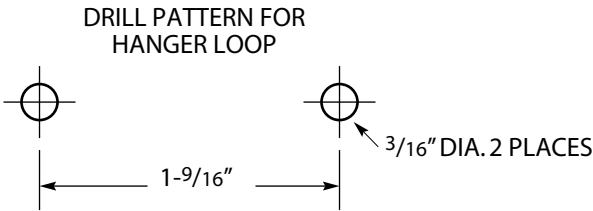

SUGGESTED LOOP HANGER LOCATION (IF NO PLUMBING CABINET USED)

The SR24 and SR34 electric Siestas come with a 10-foot power cord. The unit must be plugged into a GFCI (Ground Fault Circuit Interrupter) circuit or outlet. The GFCI should be installed by a qualified electrician. The outlet may be located on the wall or in the floor according to local electrical codes. Electrical requirements: 115 volts, 100 watts.

Produced by: J. Baer	Date: 06/06	Amended: 02/07	Version: 1	Shampoo Seating System	Siesta
----------------------	-------------	----------------	------------	------------------------	--------