## Shampoo Bowls

### 8600 PIVOTING SHAMPOO BOWL

### 8600 BACKWASH SHAMPOO BOWL WITH VACUUM BREAKER AND MODEL 522 FIXTURE INSTALLATION AND PLUMBING

**NOTE:** To familiarize yourself with the various components, please read instructions through before starting.


1. Attach the fixture to the bowl according to the instructions packed with the fixture.


# TO ATTACH HOSE RECEIVER TO BOWL (STEPS 2 thru 6).


- 2. To make hose receiver installation easier, complete these steps to cut screw threads in the mounting holes:
  - Take a mounting screw and drive it 2 or 3 turns into one hole. **DO NOT OVERTIGHTEN.**
  - Remove the screw.
  - Repeat for all four (4) mounting holes.

If the bowl is *not* equipped with a vacuum breaker, proceed to Step 4.


\*NOTE: If you ordered a vacuum breaker, your hose receiver will have two holes for mounting the vacuum breaker.

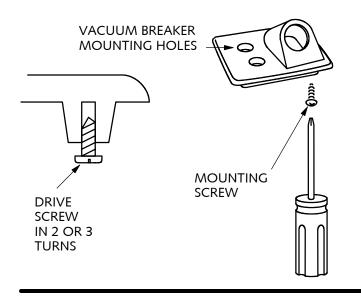


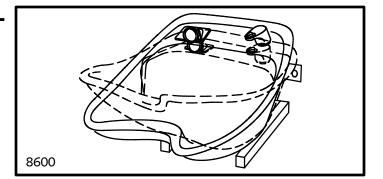

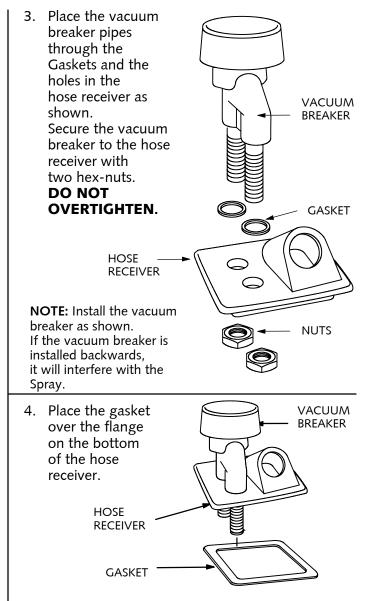

Belvedere USA LLC One Belvedere Boulevard, Belvidere, Illinois 61008 Printed in U.S.A. 4001024 Rev. 09-07

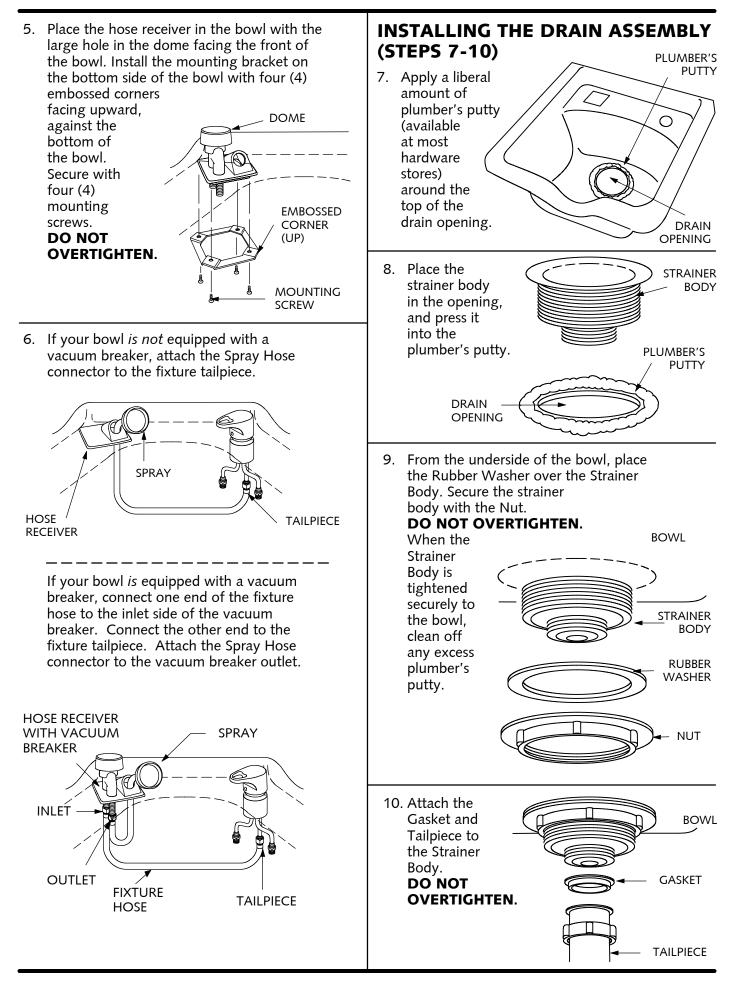

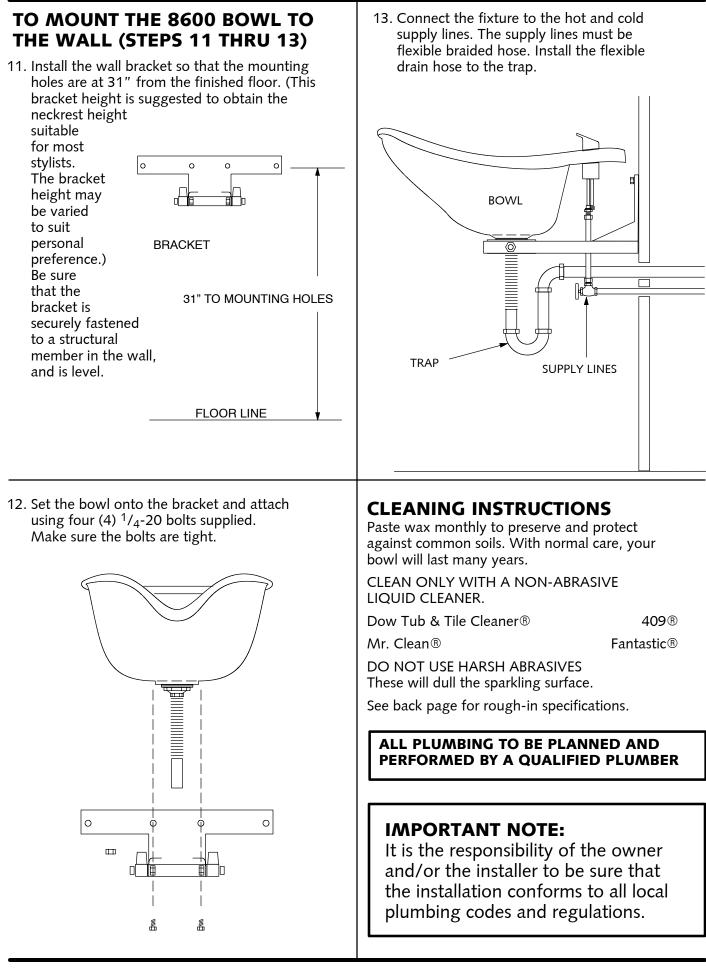

### **ROUGH-IN PLUMBING SPECIFICATIONS.**

#### **IMPORTANT NOTE:**

This shampoo bowl is designed to be used with the Belvedere SR04 and SR24 Siesta Backwash Shampoo Chairs. It can also be used with Belvedere Reclin-O-Matic shampoo chairs.

For optimum comfort when the bowl is used with Siesta Backwash Chairs, install the bowl so the neckrest is at 34-3/4" above the finished floor.

To mount the bowl at these heights, locate the bowl bracket height as shown in these specifications.

