

Part #: 12/14/15/16/18/19/69ES

Description: Electric Shampoo Chairs

Standard Features:

- Electric drive motor raises chair 5"
- Perfect 59 degree incline towards bowl
- Accommodates a wide range of customers
- Lock-in-place kick-out leg rest
- Heavy-duty chrome control on left
- Protective water-shedding skirt on rear
- Water-proof control wand
- Safe, low-voltage motor
- 300 lbs lift capacity

18ES



Specifications:

Collins' Electric Shampoo chairs are offered in seven different chair top styles. Each chair is manufactured in one of Collins' four quick-ship colors (see above). Over 80 additional custom colors are available by special order, costing 10% more and taking 2-4 weeks longer.



Optional Features:



- #10824 Three-zone massage with heat
-
-
-

Shipping and Assembly/Installation Information

Assembly Required:	<input type="checkbox"/> Yes	<input checked="" type="checkbox"/> No
Electrical Required:	<input checked="" type="checkbox"/> Yes	<input type="checkbox"/> No
Plumbing Required:	<input type="checkbox"/> Yes	<input checked="" type="checkbox"/> No
Ship Dimensions	32 "W x 28 "D x 32 "H	
Total Ship Weight	113 LBS	
# of Ship Pieces	1 Cartons	Skids

Additional Information:

110 Volts, 10 Amps, GFI Circuit

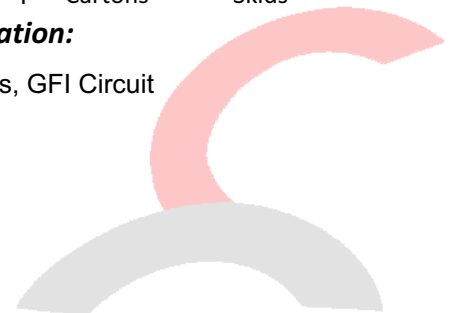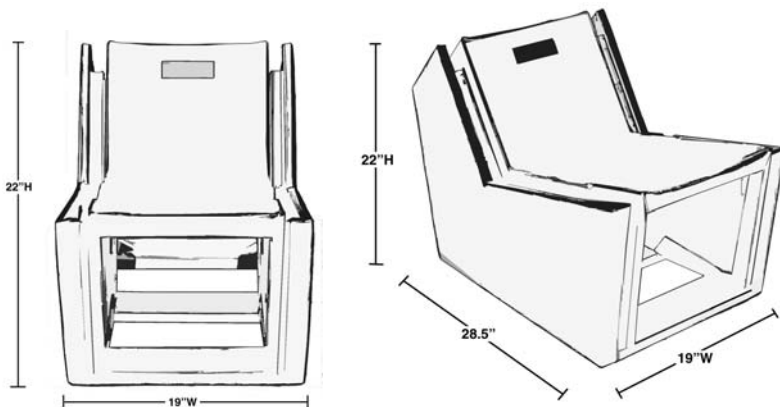



ASSEMBLY, INSTALLATION, and OPERATION
Collins Electric Shampoo Chairs

12ES, 14ES, 15ES, 16ES, 18ES, 19ES & 69ES MODELS

No customer assembly required ... fully assembled at Collins factory.

CORRECT ELECTRICAL HOOK-UP

1. Locate power cord at the back of chair near the floor.
2. Safely route the cord under the cabinet, under the floor, or under a wire threshold to prevent a person from tripping.
3. Plug chair into 110 volt, 15 amp, ground-fault-interrupter (GFI) outlet. The GFI outlet is factory recommended and may be required by local codes.

CORRECT USE & OPERATION OF THE CHAIR

1. For safety, chair should be **DOWN** all the way for client entry & exit.
2. Demonstrate operation of the kick-out footrest that may be optionally used.
3. Using the control wand, raise chair so client is best-positioned for shampoo.
4. After shampoo, use the control wand to lower the chair **AND** insure that the footrest is closed to insure safe exit from the chair.