

<u>Dryer Arm</u>

Model No.

AY-DRASFF

Installation/ Operation Manual

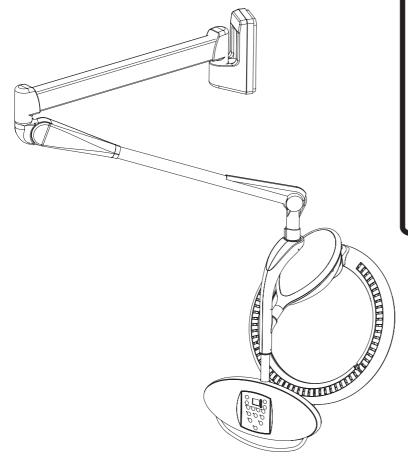


Table of Contents

IMPORTANT SAFETY INSTRUCTIONS	1
GROUNDING INSTRUCTIONS	4
Name of Each Part	5
Accessories	6
Installation Procedures	6
Adjustment of the Balance Arm 1	4
Operating Procedures 1	5
USER MAINTENANCE INSTRUCTION 1	5
Daily Inspection Procedure 1	6
Dimensions and Specifications	7
Wall Mount Plate	9

The product is a dryer arm designed for use in combination with specified product. Do not install any other products on the arm.

Failure to heed this warning may cause falling of product resulting in physical injuries.

To the customers:

Customers must not install the product by themselves. Customer must store these instructions in a safe place so as not to lose them.

To the installer:

The instructions should be thoroughly read and understood before installation to ensure the product is installed correctly. After installation, give this instructions to the customer.

February 2012 First Version

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safty precautions should always be followed, including the following:

Before Using the Product

Carefully read through the Safety Precautions and use the product correctly. Furthermore, to use the product safely, be sure to perform the daily inspection following the procedures described in the USER MAINTENANCE INSTRUCTION (page 15). In case the product is continually used without performing daily inspections, product failures or accidents may occur.

Precautions stated here are for the purpose of the following:

Ensuring safe use of the product and preventing harm and damage to yourself and other persons.

Each of the precautions identifies an important item concerning safety. Be sure to observe the instructions.

We are not responsible for injuries and damage to the user and other persons should an accident occur due to failure to comply with these precautions. If this is the case, the persons who use the product without observing the safety precautions will bear responsible for the injuries and damage.

The following section provides detailed explanations of the precautions. Fully understand the meaning before reading the body text.



This mark warns the user that "ignorance of this display and improper use may result in critical risks of death or serious personal injury".



This mark warns the user that "ignorance of this display and improper use may cause death or serious personal injury".



This mark warns the user that "ignorance of this display and improper use may cause slight to moderate personal injury or property damage".



Indicates the general prohibited behaviors.



Indicates the prohibition of water splashing and use in a water location.



Indicates the prohibition of disassembly, repair, or modification.



Indicates the need for paying attention to electrical shock.



Indicates enforcement or instructions for general user behavior.



Indicates the instruction to disconnect the power plug from the outlet.



Indicates the instruction to ground the product appropriately.



WARNING

Never touch the inside of the main unit.



Never touch the inside of the product. Neglecting this warning may cause an electrical shock. For maintenance and service of the product, be sure to contact the nearest dealer or Takara Belmont directly.


IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING, KEEP AWAY FROM WATER.



DANGER

Warning concerning Power Supply.

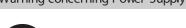

Always unplug this appliance immediately after using.

Do not water the equipment.



Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not use while bathing. Do not place in or drop into water or other liquid. Do not reach for an appliance that has fallen into water. Unplug immediately.



WARNING

To reduce the risk of burns, electroction, fire, or injury to persons:

Be sure to execute the daily check.



Execute the daily check according to the "Daily Inspection Procedure" described in this manual (page 16). Improper use or operation of the product may result in injuries or accidents including burns.

Do not operate the equipment in a tilted state.



Incorrect detection by the infrared temperature sensor may cause abnormal heating of the customer head. In addition, falling of the product may result in electric shock, fire, or damage.

Warning concerning Power Supply.



An appliance should never be left unattended when plugged in.

Never disassemble or repair the product by yourself.



Persons other than the repair engineer must not disassemble, repair, or modify the product. Neglecting this warning may cause ignition or abnormal operation resulting in physical injuries.

0

Be sure to turn off the power of the main unit each time the work is completed.
Be sure to disconnect the power plug before moving the product.

Disconnect the power plug before fixing the product.



Be sure to disconnect the power plug when fixing the product. Do not connect or disconnect the power plug with wet hands. Neglecting this warning may result in an electrical shock or injuries.



If the pins or the area near the pins of the power plug are contaminated with waste hair or chemical agent, wipe the area thoroughly with a dry cloth. Firmly tighten all nuts and screws.



If the screws are loose, the wall bracket may come loose allowing the arm to fall.

Be sure to ground the product



Be sure to ground the product to use it safely. If not grounded or inappropriately grounded, there may be a risk of electric shock when electric failure or electric leakage occurs. Contact a qualified installer for grounding. Customers must not ground the product by themselves.

Do not apply excessive loads.



Resting your arm or leaning on the end of bracket may cause the balance arm to break or fall resulting in physical injuries.

0

Do not ground to:

Hard plastic is used for many pipes, and it is not possible to ground to them completely.

□ Gas pipe

There are risks of explosion or/and fire.

□ Lightning rod and telephone cable

Do not install the wall bracket without sufficient wall support.



Since a strong force will develop on the wall bracket, the mounting base of the bracket must be sturdy enough to support the product and dryer arm. Do not mount the bracket on a common rafter, the bar beneath a faced wall, or on gypsum board alone. Neglecting this caution may cause the screws to fall off allowing the bracket to fall due to loose screws from a deformed wall.

(Example: 10 x 10 cm column)

IMPORTANT SAFETY INSTRUCTIONS



WARNING

Do not detach the stopper on the dryer arm until all work is complete.

Be sure to use the wall mount plate for mounting the arm on the wall.



Never detach the stopper mounted on the balance arm until installation of the dryer arm is complete. Detachingthe stopper without installing the dryer will allow the dryer arm to flip up resulting in accidents and breakage of the lighting devices. (ref. page 8)



Be sure to use the wall mount plate of dryer arm before mounting the arm on the wall.

Never detach the devices mounted on the dryer arm by yourself.


Handling of Power Cord.




Never allow persons other than repair engineers to detach the devices mounted on the dryer arm. Failure to heed this warning may result in breakage or malfunction of surrounding facilities or physical injuries due to electric shock hazard or fire.



Keep the cord away from heated surfaces.

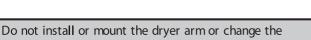

Connect this appliance to a properly grounded outlet only. See Grounding Instructions.

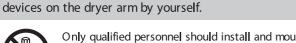



Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped into water. Return the product to a service center for examination and repair.



Only qualified personnel should install and mount the dryer arm or change the device on the dryer arm.

♠ CAUTION

Handling of power cord.



When disconnecting the power plug, do not hold it at the cord, but pull it off while holding the plug.



Operate the devices slowly without applying excessive force. Failure to heed this warning may result in malfunction, breakage, or falling of the product.



If the power cord or the power plug is damaged or when engagement with the wall outlet is loose, do not use the cord or the plug. Pay attention to the surrounding areas when operating the product.

Do not operate the devices in haste.



Be sure to verify that no personnel or objects are within the operating area of the product. Failure to heed this warning may result in physical injuries or breakage of surrounding facilities.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short-circuit, grounding reduces the risk of electric shock by providing apath of low resistance for the electric current. This appliance is equipped with a cord having a grouding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in compliance with all local codes and ordinances.

⚠ DANGER

Improper use of the grounded. In the event of an electrical short-circuit, grounding reduces the risk of electric shock. Check with a qualified electrician or service personnal if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the appliance, if it will not fit the outlet, have a proper outlet installed by a qualified electrician.


If repair or replacement of the cord or plug is necessary, do not conect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

This appliance is for use on a nominal, 120-volt circuit and has a grounding plug that looks like the plug illustrated in sketch A of Figure 1. A temporary adapter, which looks like the adapter illustrated in skeches B and C of Figure 1, may be used to connect this plug to a 2 pole receptacle as shown in sketch B of Figure 1 if a properly grounded outlet is not available. The temporary adapter should be used only a properly grounded outlet(sketch A of Figure 1) can be installed by a qualified electrician. The green rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by the screw.


This appliance is for used on a circuit having a nominal rating of 120-volt and is factry equipped with a specific electric cord and plug to permit connection to a proper electric circuit. Make sure that the appliance is connected to an outlet having the same configuration as the plug. No adapter should be used with this appliance. Do not modify the plug provided if it will not fit the outlet. Have a proper outlet installed by a qualified electrician. If the appliance must be reconected for use on a different type of electric circuit, the reconection should be made by qualified service personnel.

If it necessary to use an extension cord, use only a three- wire extension cord that has a three- blade grounding and three- slot receptacle that will accept the plug on the appliance. Replace or repair a damaged cord.

Figure1 < Grounding Plugs >

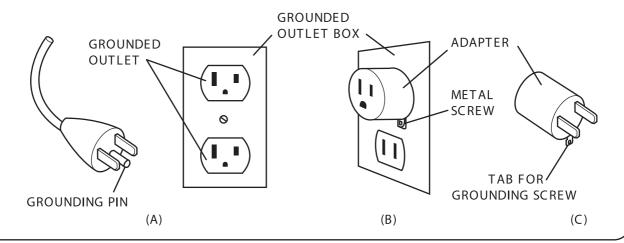


Name of Each Part

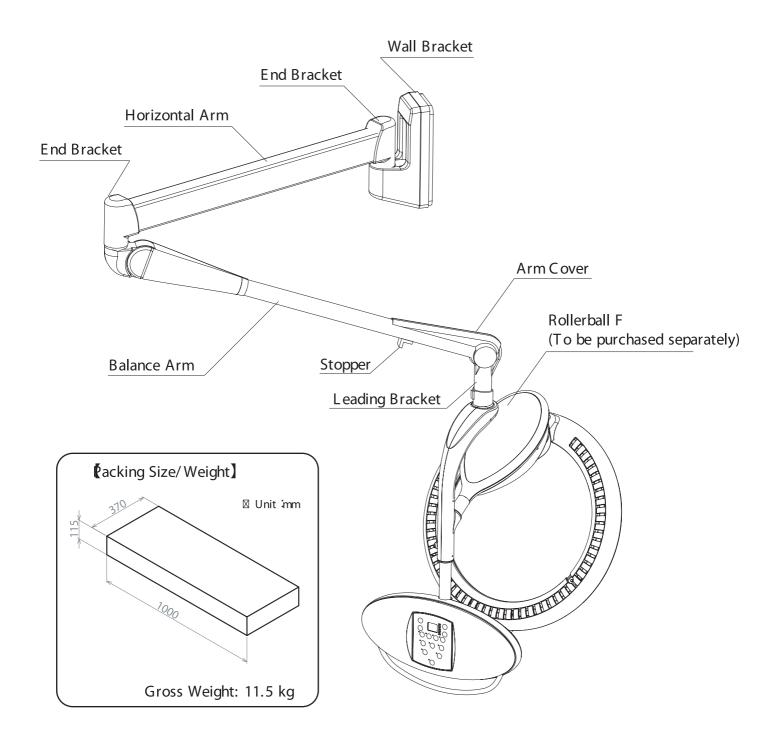


Accessories



Installation / Operation Manual 1 copy

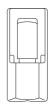

Wall Bracket 1 piece

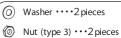


Screw Set for Wall Bracket 1 set

Wood screw · · · 10 pieces

Coach bolt · · · 4 pieces

Anchor bolt · 4 pieces

Screw Set for wall mount plate 1 set

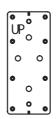


Wall mount plate 1 piece

Installation Procedures

<procedures></procedures>			
1. Installing the wall m	ount plate $\cdot \cdot \cdot \cdot \cdot \cdot \cdot \cdot \cdot P7 \sim 9$		
	A. Checking the wall base $\cdots \cdots P 7$ B. Confirming the position of installation $\cdots P 7$ C. Performing installation according to the wall material $P 8$		
2. Installing the wall bracket \cdot · · · · · · · · · · · P 1 0 \sim 1 1			
	A. Detaching the cover from the wall bracket · · · · · P 1 0 B. Securing the wall bracket on the wall mount plate · · P 1 0 C. Attaching the cover of the wall bracket · · · · · · P 1 1		
3. Installing the dryer arm \cdot			
	A. Installing the dryer arm · · · · · · · · · P 1 1 B. Attaching the cover of the wall bracket · · · · · P 1 2		
4. Installing the processor on the dryer arm \cdot \cdot \cdot \cdot \cdot \cdot \cdot \cdot P 1 2 \sim 1 3			
	A. Detaching the cap of the leading bracket $\cdots P \ 1 \ 2$		
	B. Installing the processor on the dryer arm $\cdot \cdot \cdot \cdot \cdot P \ 1 \ 3$		
	C. Detaching the stopper of the balance arm $\cdot\cdot\cdot\cdot$ P $$ 1 $$ 3		
	D. Checking the operation · · · · · · · · · · · P 1 3		

1 Installing the wall mount plate

Installation procedures differ depending on the material of the mounting wall surface.

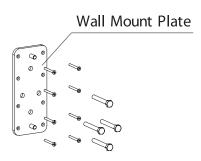

A. Checking the wall base

The wall must be reinforced with a high quality wooden column of $120 \text{mm} \sim 150 \text{mm}$ thickness as a base. The column should be attached vertically.

□ Reinforced concrete

Concrete compressive strength should be 200kgf/cm²or higher for installing the dryer arm.

∅ Other materials


In case of using other materials, contact the nearest dealer or Takara Belmont directly.



In the case that the wall is made of low-strength material such as a gypsum board, cut the surface of the wall mounting position, and attach a high quality wood such as plywood. Neglecting this may cause the screws to fall off allowing the bracket to fall due to loose screws from a deformed wall.

B. Confirming the position of installation

Pay attention to the correct direction of the wall mount plate. Install the wall mount plate as shown below.

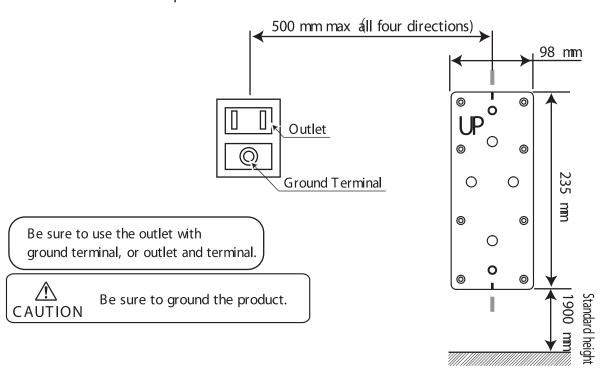

Attach the wall mount plate properly according to the following instructions.

⚠ WARNING


After checking the material of the wall, reinforce the wall properly for attaching the dryer arm. Neglecting this may cause falling accidents.


C. Performing installation according to the wall material

- 1. Draw a perpendicular line on the wall.
- 2. Using the wall mount plate as shown in the illustration, drill four holes (10.5mm Dia. / 60mm 65mm Deep) on the wall. Check that the perpendicular line comes to the center of both upper and lower holes.
- 3. Insert and hammer the supplied anchor bolts in the holes. When fixing the wall mount plate with nuts, check that the perpendicular line on the wall aligns with the center of both upper and lower holes, and the mark- off lines on the wall mount plate also align with this line.

In the case that the perpendicular line on the wall misalign from the center of holes, attach the wall mount plate at the position where the from the line to both the upper and the lower holes to be the same.

In the case that wall is made of low-strength material such as gypsum board, cut the surface of the wall mounting position, and attach high quality wood such as plywood. Neglecting this caution may allow the wall plate to sink down, or bolts or screws may fall off.

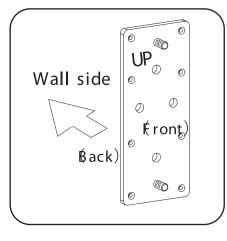

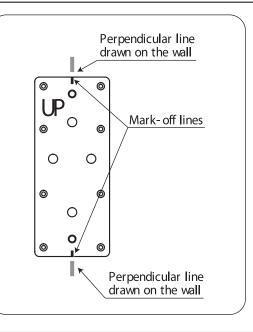

CAUTION

When attaching the wall mount plate on the wall, be sure to attach it perpendicularly. Failure to follow this caution may cause tilting of the dryer arm resulting in inproper operation.

C. Performing installation according to the wall material

Attach the wall mount plate properly according to the following illustrations.

<u>/!\</u>


After checking the material of the wall, reinforce the wall properly for attaching the dryer WARNING arm. Neglecting this may cause falling accidents.


- 1. Draw a perpendicular line on the wall.
- 2. Using the wall mount plate as shown in the illustration, drill four holes on the wall. Then, fix the four pieces of supplied coach bolts temporarily.
- 3. Make sure that the mark- off lines on the wall mount plate aline with the perpendicular line drawn on the wall, then fix the coach bolts tightly. (See below illustration.)

In the case that the perpendicular line on the wall misalign from the center of holes, attach the wall mount plate at the position where the distance from the line to both the upper and the lower holes to be the same.

4. Fix the supplied flat wood screws (8 pieces).

<u>/!\</u> WARNING Fix the supplied coach bolts and wooden screws firmly. Be sure to use all the supplied bolts and screws. Neglecting of this caution may cause toppling or falling accidents.

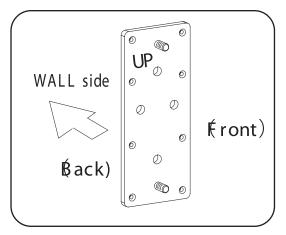

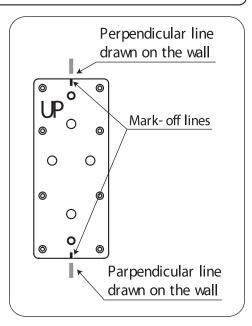

Installing the wall bracket


Install the wall bracket on the wall mount plate mounted on the wall surface.

* Detach any existing bracket and use the wall bracket that comes with the dryer arm.

Wall Bracket

A. Detaching the cover from the wall bracket

1 Remove the screws.

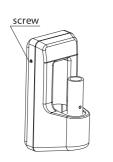


②Detach the upper cover from the wall bracket cover.

Insert the tip of a flat head screwdriver into the gap of the upper cover and detach




3 Detach the hole cap from the wall bracket cover.

Insert the tip of a flat head screwdriver into the gap of the hole cap and detach it.

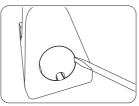



4) Detach the wall bracket cover from the wall bracket.

Depress the stopper of the cover as illustrated below and detach the wall bracket cover.

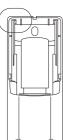



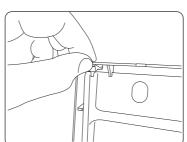

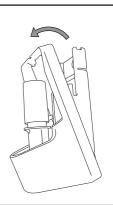


B. Securing the wall bracket on the wall mount plate

1) Install the wall bracket on the wall mount plate.



Firmly tighten the screws of the wall bracket. If the screws become loose,

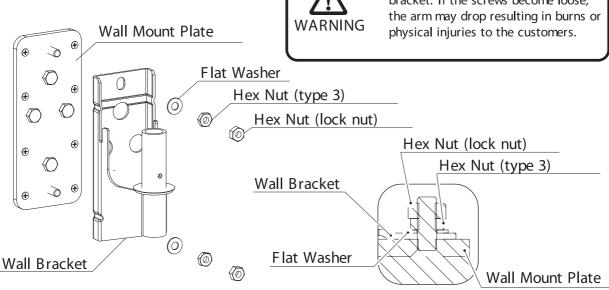


C. Attaching the cover of the wall bracket

① Attach the wall bracket cover to the wall bracket.


Hook the stoppers on the lower part of the wall bracket cover to the pitted area of the wall bracket.

Next, hook the stoppers on the upper part of the wall bracket cover onto the upper pitted area of the

wall bracket.

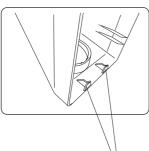





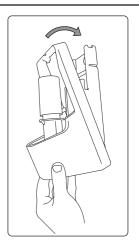



②Attach the upper cover of the wall bracket cover.


Insert the stopper on the lower side into the wall bracket cover and then hook the stoppers on both sides of the upper cover onto the wall bracket cover.

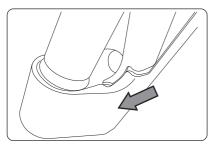

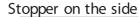

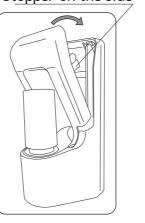

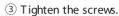

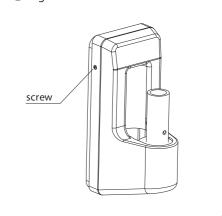


3 Installing the dryer arm

Insert the end bracket of the horizontal arm into the wall bracket shaft.

A. Installing the dryer arm




Installing the dryer arm in a narrow space may damage the apparatuses or equipment if it contacts surrounding equipment.

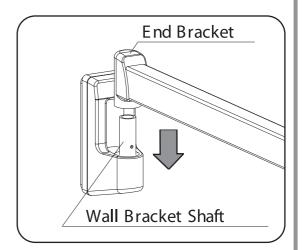


B. Attaching the cover of the wall bracket


①Pass the power cord of the dryer arm through the hole of the wall bracket cover.

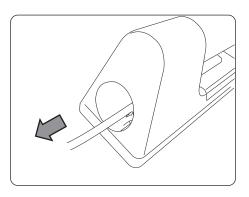


②Attach the hole cap of the wall bracket cover.

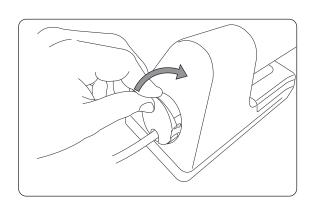


- 4 Installing the processor on the dryer arm
 - A. Detaching the cap of the leading bracket
 - ①Remove the screws of the hook.
 - 2) Slide the hook cover metal upward.
 - ③Detach the hook.
 - 4 Detach the cap of the leading bracket.

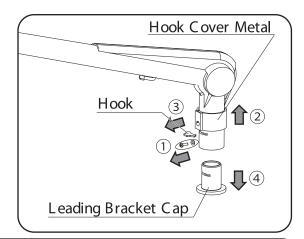

 $\ \ \, \boxtimes \,$ Be sure to do this procedure with the stopper pulled by the flat head screwdriver etc., as shown in the illustration below.

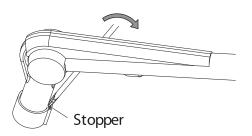

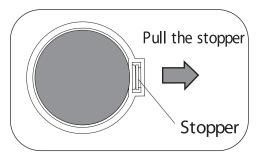




When a chemical adheres to the hook cover metal, immediately wipe it off with a soft, dry cloth. Damage to the cover resulting from chemicals may cause the main unit to fall.

B. Installing the processor on the dryer arm


- ①Insert the processor, such as a dryer, into the leading bracket.
- * Fully insert the processor until the rotation shaft and the groove on the hook align.
- 2 Insert the hook into the groove.
- 3 Slide the hook cover metal downward.
- 4Tighten the screw.

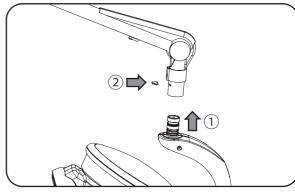




Be sure to mount the hook cover metal after installing the hook.

Imperfect insertion of the hook, failure to tighten the screw, or breakage of cover caused by excessive tightening of the screw may cause the processor to fall.

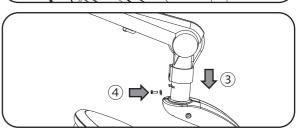

C. Detaching the stopper of the balance arm


The stopper installed on the balance arm (which is movable in the perpendicular direction) will be required for aftermaintenance. Be sure to mount and secure the stopper in the reverse direction as illustrated.

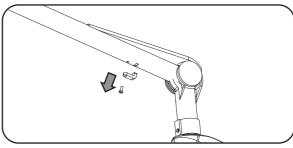




After detaching the stopper, always check the upperend position of the arm. If it contacts the lighting devices on the ceiling, adjust it according to the procedures described in the section "Adjustment of the Balance Arm."

Mount the stopper in the reverse direction.

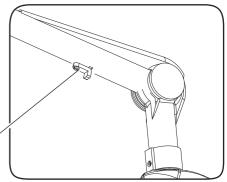

D. Checking the operation

After inserting the plug into the wall outlet and ground the product, check if the product works without problems.

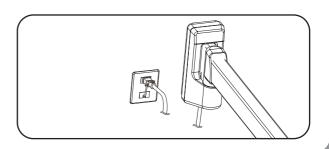


Adjustment of the Balance Arm

<Removing the adjustment bar>

Detach the arm cover.

* The arm cover can be detached by sliding the cover in the direction of the arrow, while opening it on both sides.

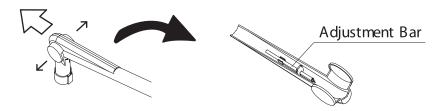

1. Adjusting the lift angle of the balance arm.


If the ceiling is low or the balance arm interferes with lighting equipment, adjust the lift angle of the balance arm.

* The lift angle is easily adjusted.

Detach the adjustment hole cover and then rotate and adjust the adjustment screw in the counterclockwise direction to stop the arm at the specified height. The adjustment differs depending on the angle.



Make sure that the balance arm does not contact any other equipment, such as lighting devices on the ceiling, when the arm is in the upper-limit position. Installation of the arm without checking the state may allow the arm to contact lighting equipment resulting in damage.

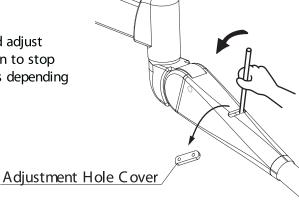

2 Adjusting the balance of the balance arm.

If the dryer or the processor mounted on the balance arm is not balanced in the specified position, then adjust the balance.


- * The balance can be easily adjusted.
 - A) In the case that the suspended device goes up from the lower-limit position.
 - ①Detach the arm cover and remove the adjustment bar.
 - ②Move the balance arm up and down and then set it in the position where the adjustment screw can be seen in either of the two punch holes (See the illustration at the right).
 - ③Insert the adjustment bar into the adjustment screw hole and rotate it in the (-) direction. Since the amount of the adjustment is not constant, check the balance each time the screw is rotated.
 - (B) The suspended device goes down from the upper-limit position.
 - 1 and 2: Follow the same procedures as Item (A) above.
 - ③Insert the adjustment bar into the adjustment screw hole and then rotate it in the (+) direction. Since the amount of the adjustment is not constant, check the balance each time the screw is rotated.




If the balance adjustment is imperfect, the suspended device cannot be held in the specified position, which causes the main unit to descend during practice, resulting in burns or physical injuries to personnel.

Operating Procedures

1. Hold the device (processor or dryer) mounted at the leading end of the dryer arm and move it to the customer's position.

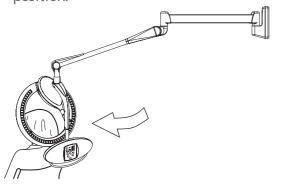


2 After using the device, fold the dryer arm.

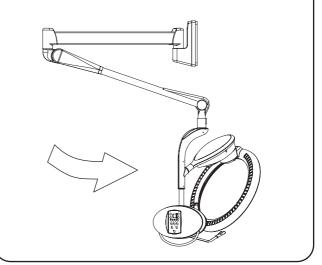

When setting the product, pay attention so that the dryer arm or the device will not contact surrounding facilities or personnel. Furthermore, move the product by holding the product by the grip; move slowly and safely. Failure to heed this warning may cause burns or physical injuries due to product damage.

USER MAINTENANCE INSTRUCTION

Be sure to disconnect the power plug from the wall outlet for maintenance and cleaning of the product.

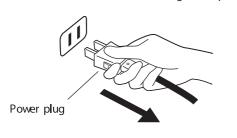

Splashing of water on the control panel or metal parts may result in product failure or rusting. Immediately dry the product with a soft cloth.



The product should not be exposed to moisture and water.


The plastic, plated, or painted parts should be wiped with a dry and soft cloth.



When fixed contamination or oil adheres to the product, wipe it off with a damp cloth with a water-diluted neutral detergent.



Never use volatile chemicals such as thinner, alcohol, gasoline, and kerosene; detergents containing organic materials; acidic-, alkaline- or chlorine-based detergents; and wax containing abrasive compound, sponge, scrubber, etc.

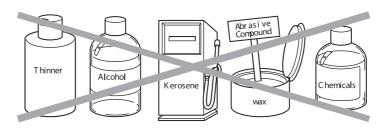

Daily Inspection Procedure

↑ WARNING

Be sure to execute daily inspection according to the following guidelines. Continued use without executing the daily inspection may result in failure or accidents.

To use the product safely, be sure to execute the following inspections.


☐ Daily Inspection Items (Pre-Operation Check)

Inspection Item	Inspection Procedures	If the inspection result is unacceptable
□ C heck if there is no deformation, breakage, or deterioration on the power plug or the power cord.	Checks before operating the product: There is no deformation, breakage, or deterioration of the power plug or the power cord. Checks while the product is in operation (this is limited to the case that there is no deformation, breakage, or deterioration of the power plug or the power cord.) The power plug or the power cord may be heated when it is deteriorated. While the product is in use, touch the power plug and the power cord with a hand and make sure that they are not hot.	There is a possibility of electrical shock or burn injuries due to fire or electrical leakage. Since some parts must be replaced, immediately stop using the product, turn off the power plug, and immediately contact the nearest dealer or Takara Belmont directly.
Make sure the wall bracket is not loose.	Move the device mounted on the dryer arm and check the action.	If you suspect something is wrong, such as the bracket swings at the base part on the wall, disconnect the power plug and immediately contact the nearest dealer or Takara Belmont directly.
Make sure the device mounted on the dryer arm is not loose.	Move the device mounted on the dryer arm and check the action.	If you suspect something is wrong, such as the arm swings at the connecting part, disconnect the power plug and immediately contact the nearest dealer or Takara Belmont directly.
Make sure the dryer arm operates safely without any problem.	Move the device mounted on the dryer arm and check the action.	If you suspect something is wrong, disconnect the power plug and immediately contact the nearest dealer or Takara Belmont directly.

Any other servicing should be performed by an authorized service representative.

Dimensions and Specifications

[Unit: mm]

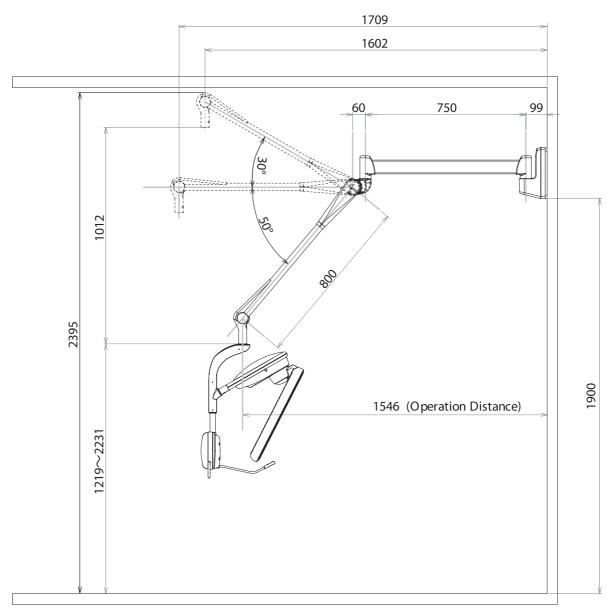


^{*} The values are reference values when the lower end of the wall mount plate is installed at a height of 1900 mm from the floor surface.

Model No.	AY-DRASFF
Weight	10.3kg
Operating Temperature Range	10🛭 ~40🖾
Operating Humidity Range	30%∼75%RH
Power Cord Length	1 m


^{*} The respective specifications are subject to change without notice.

Dimensions and Specifications

[Unit: mm]

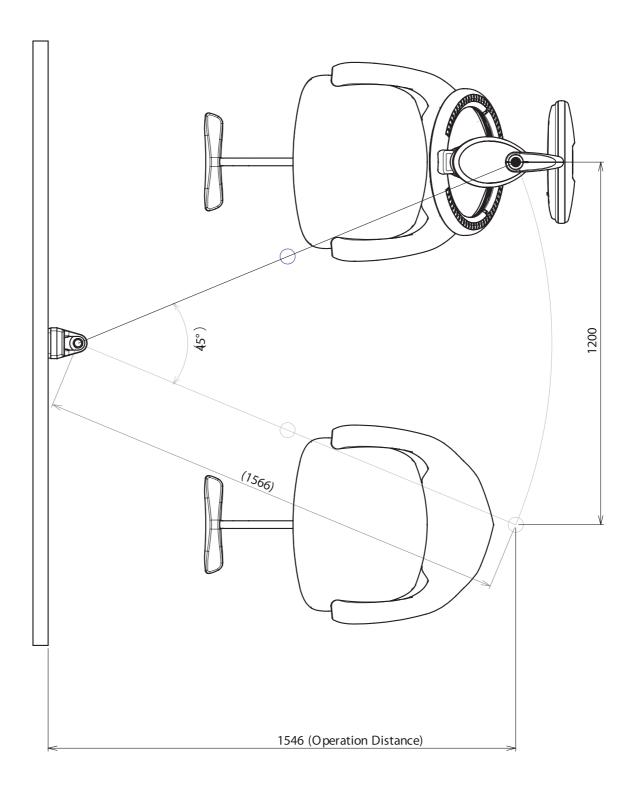

Wall Mount Plate

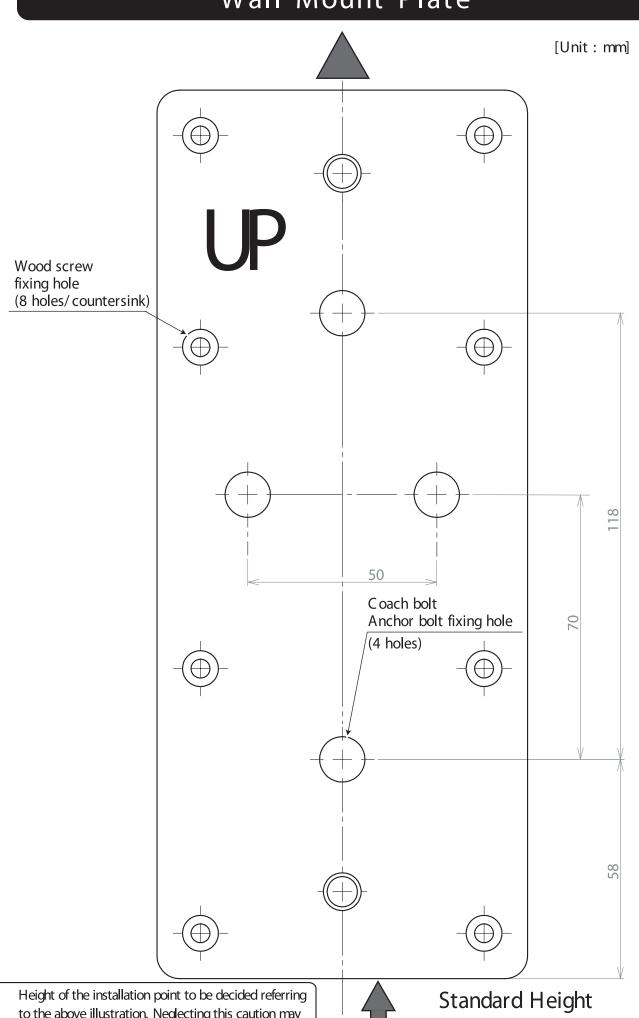

 \triangle CAUTION to the above illustration. Neglecting this caution may cause an inconvenient use of the product.

1900 (From the floor)